

corner pantry cabinet

trendstyle

www.trendstyle.com.au



equipment required


- Cordless drill
- Drill bits:
No 2 screw tip, 4mm bit, No 12 countersinking bit
- 65mm wood screw
- Wall fixing (only if fixing cabinet to wall)
- Tape measure
- Adjustable square
- Spirit level
- Quick release clamps
- Pencil
- Safety gear:
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

assembly instructions

included materials

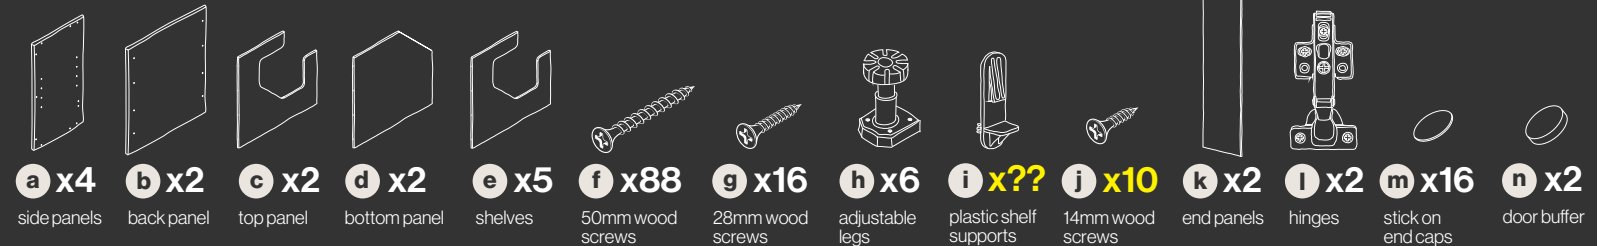


step 1

base cabinet assembly


1

Attach one of the back panels (b) to the top (c) and bottom (d) panels using 50mm wood screws (f).

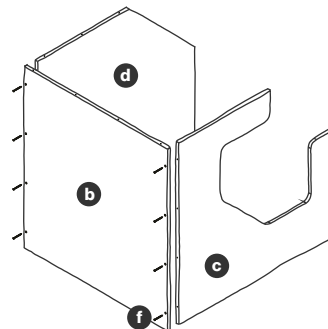


2

Attach the side panel (a) using 50mm wood screws (f).
Note: The hinge plate holes are positioned at distances of 132mm and 222mm from the edges of the side panel. Make sure that the hinge plate holes measuring 222mm are oriented towards the top panel.

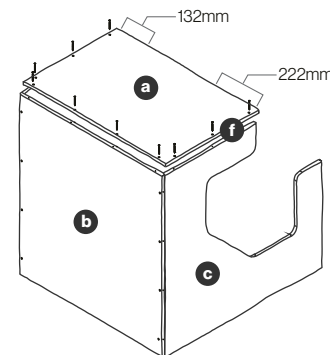


3

Attach the remaining back panel (b) using 50mm wood screws (f).

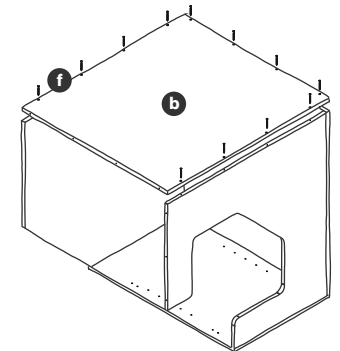


4

Insert one of the adjustable shelves (e) before adding the side panel in the next step.

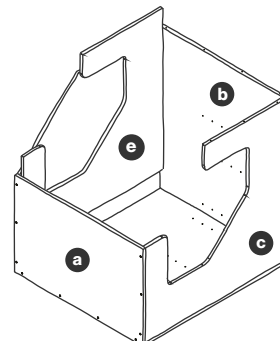


5

Attach the side panel (a) using 50mm wood screws (f).

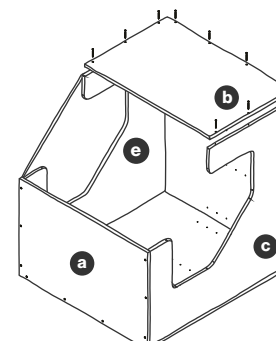

6

Base corner pantry complete. Follow next steps for top of pantry.

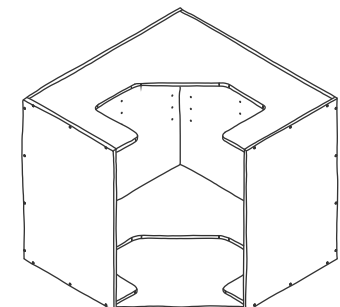


step 2

top cabinet assembly

1


Attach one of the back panels (**b**) to the top (**c**) and bottom (**d**) panels using 50mm wood screws (**f**).

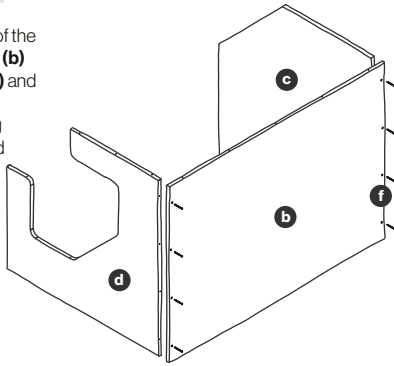

2


Attach the side panel (**a**) using 50mm wood screws (**f**).

Note: The hinge plate holes are positioned at distances of 116mm and 227mm from the edges of the side panel. Make sure that the hinge plate holes measuring 227mm are oriented towards the top panel.

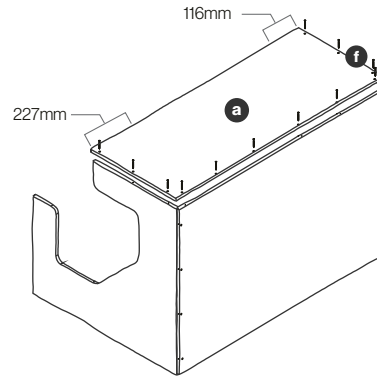

3


Attach the remaining back panel (**b**) using 50mm wood screws (**f**).

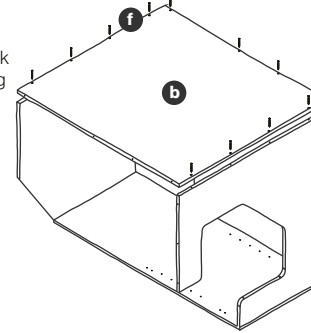

4

Attach the side panel (**a**) using 50mm wood screws (**f**).

The top pantry cabinet is now complete.

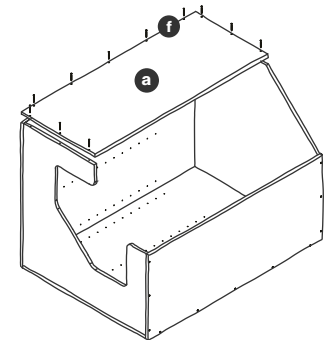


step 3

joining the top and bottom

1

To properly assemble the pantry, you will need to work out which is the top and base components. The base component has a height of 865mm, while the top component stands at 1335mm.

Attach the top and bottom together using 28mm wood screws (**g**).

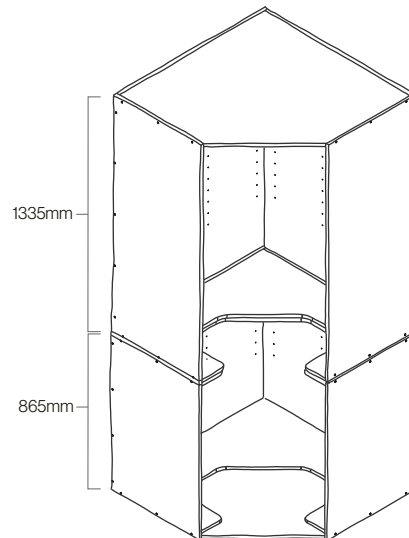


1

Insert the shelf supports (**i**) at your desired shelf heights.


Turn each adjustable shelf (**e**) on an angle to place inside the cabinet.

Rest the adjustable shelves on the shelf supports.

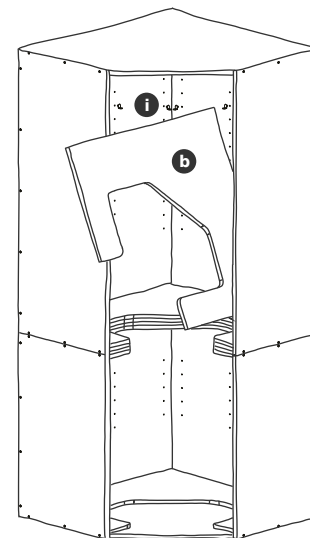

2

Insert the adjustable shelves (**e**) on the shelf supports (**i**).

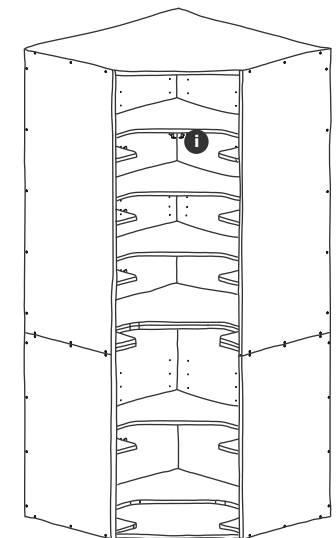


step 5

end panel attachment

1

Attach the two end panels (**k**), securing from the inside using 28mm wood screws (**g**).

Ensure that the panel is set back 14mm from the front of the cabinet (there should be a 20mm void at the back).

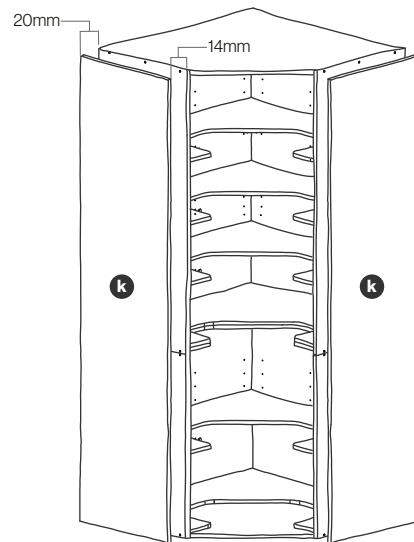


step 6

securing to the wall

1

Check again that your cabinet is level. If you have a plasterboard wall, attach cabinets using no less than 8 timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.



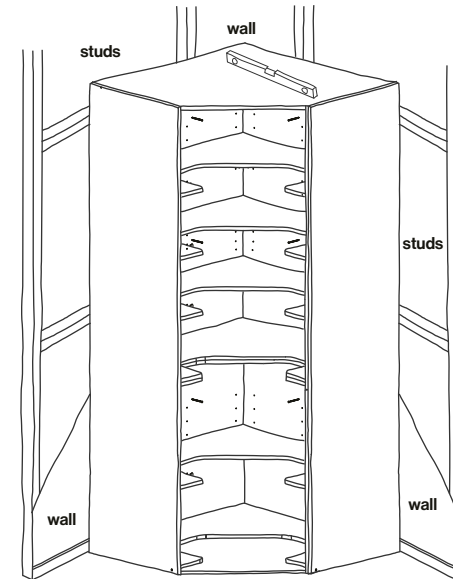


step 7

attaching the door

1

- Clip the hinge plates onto the door panel
- Push down to clip hinge together securely
- Adjust the screws to align the doors and add extra screws once door is positioned correctly.

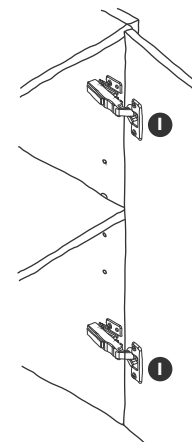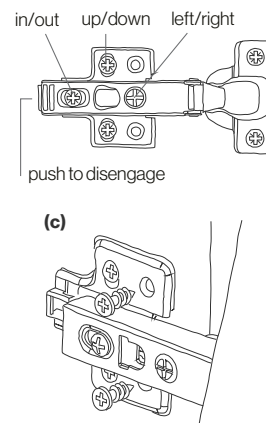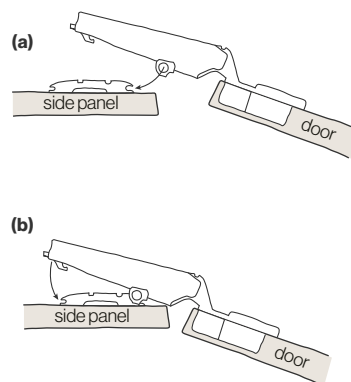

! care instructions

Your Trendstyle cabinets are crafted from high-quality materials to ensure longevity, provided that proper care and maintenance are observed.

When cleaning your cabinets, it is essential to use a non-abrasive cleaner and avoid materials such as steel wool or abrasive items that may cause scratches and damage. Harsh chemicals or thinner-based products should be avoided as they can harm the melamine surfaces.

While our cabinets are resistant to water, they are not completely waterproof, so it's important to use only damp cleaning cloths, avoiding saturation. Promptly address any large spills of water that may occur. We have a dedicated customer service line available to provide assistance and answer any inquiries you may have regarding our products.