


1000mm blind corner pantry

trendstyle

www.trendstyle.com.au

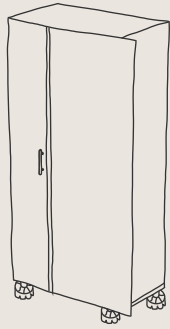

equipment required


- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

assembly instructions

included materials

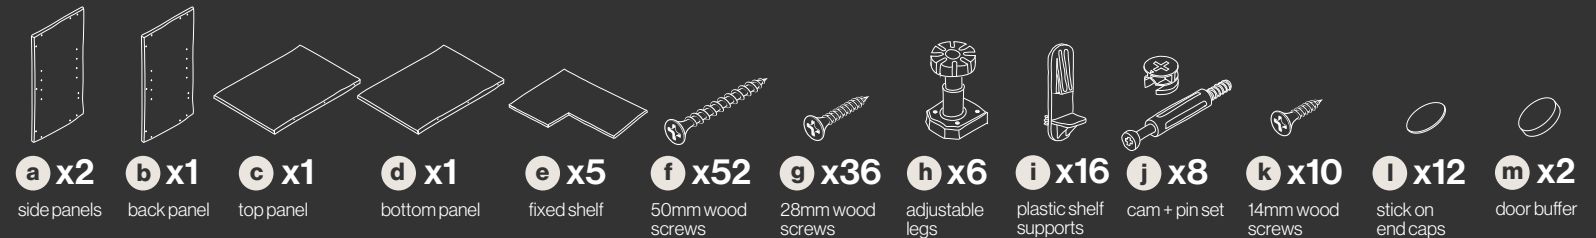


step 1

cabinet assembly


1

Attach the side panel **(a)** to the back panel **(b)** using 50mm wood screws **(f)**.

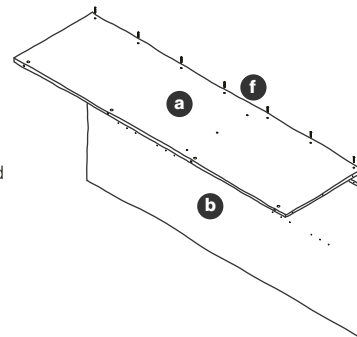


2

Attach the fixed shelf **(e)** to the side and back panel using 50mm wood screws **(f)**.

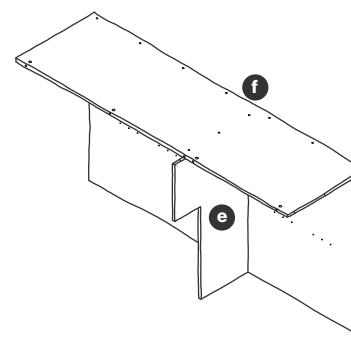


3

Attach the remaining side panel **(a)** to the back panel using 50mm wood screws **(f)**.

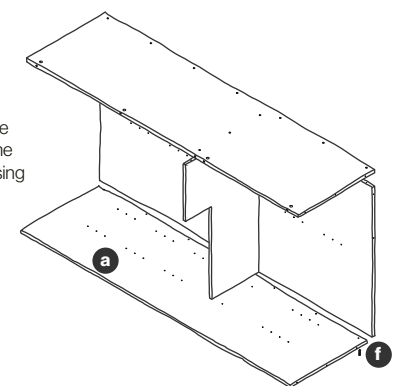


4

Attach the top panel **(c)** and the bottom panel **(d)** to the side and back panels using 50mm wood screws **(f)**.

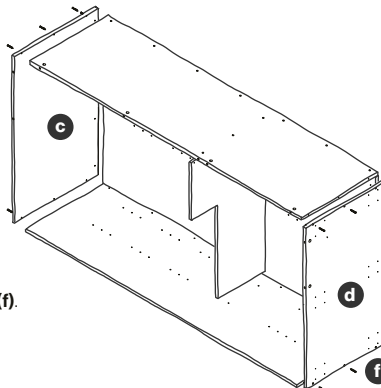


5

Locate the 6 groups of pre-drilled holes on the bottom panel & attach the adjustable leg plates **(h)** using 28mm wood screws **(g)**.

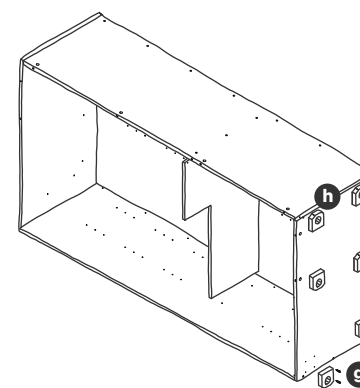

6

Attach all of the legs **(h)** to the plates and adjust the height of the legs to 145mm.

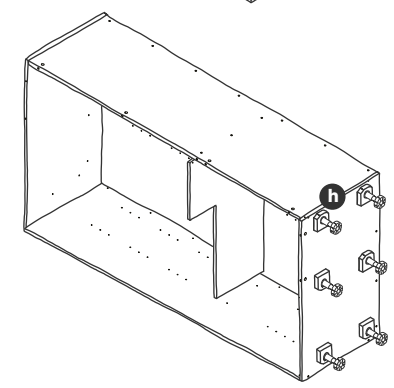


step 1

cabinet assembly *continued*


1

Turn your cabinet upright and adjust the height of the legs to 145mm.

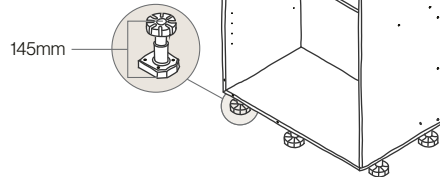


2

Turn your cabinet upright and insert the plastic shelf supports (i) at your desired shelf heights.

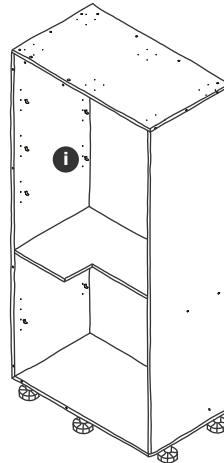


3

Slide the shelves (e) into position, resting on the supports.

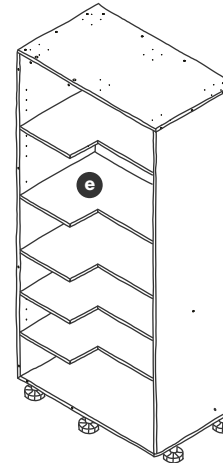

4

Install blind corner pantry panel. These instructions are included in step 4.

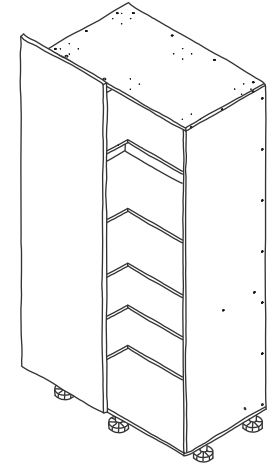


step 2

joining cabinets

1

Check your cabinets are level. Clamp cabinets using quick release clamps. Attach the cabinets together using using 28mm wood screws (g).

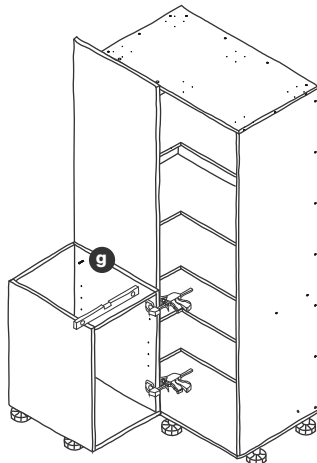


1

Using cabinet supports, align the cabinets and hold together using quick release clamps.

Ensure the cabinets are level.

Tip: It may be best to align the top of the cabinets with the top of your pantry.


Note: AUS/NZ standards requires a minimum distance of 600mm between burners and the rangehood.

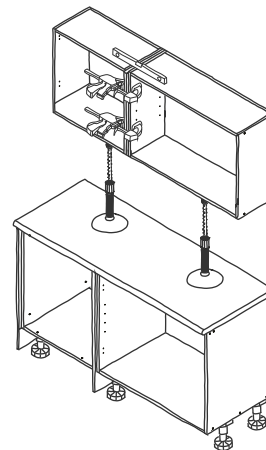

2

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

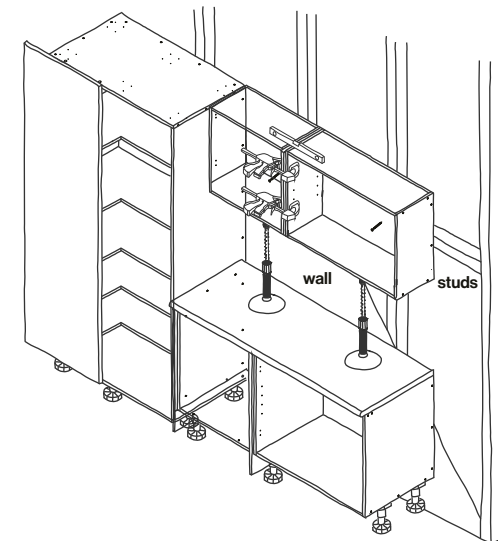


step 4

panel for blind corner pantry


1

You have the flexibility to alter the cabinet's orientation for a left or right opening by altering the position of the blind corner pantry panel to the cabinet. It's important to take into account your kitchen layout before installing the panel.

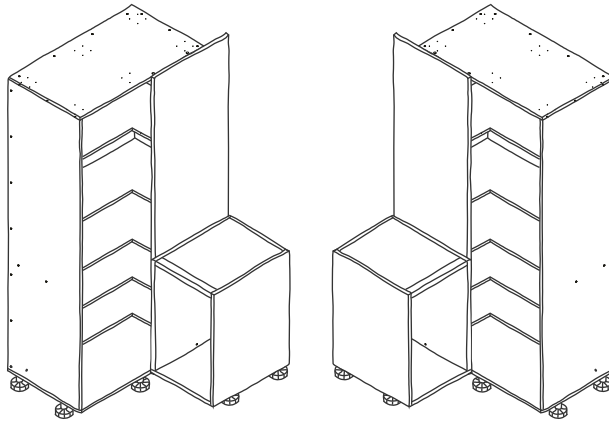


2

Attaching cam pins to panel as per drawing.

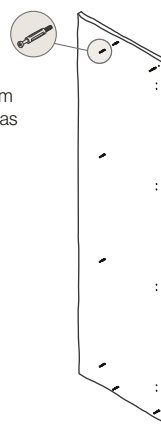


3

Attaching cams to pantry as per drawing.

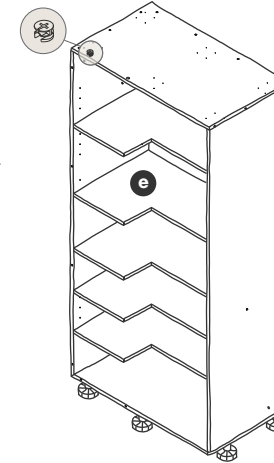

4

Secure the panel to the cabinet, ensuring that the marked line aligns evenly with the cabinet's side.

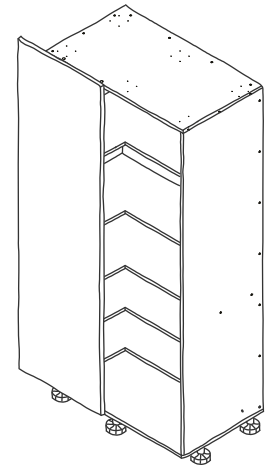

! care instructions

Your Trendstyle cabinets are crafted from high-quality materials to ensure longevity, provided that proper care and maintenance are observed.

When cleaning your cabinets, it is essential to use a non-abrasive cleaner and avoid materials such as steel wool or abrasive items that may cause scratches and damage. Harsh chemicals or thinner-based products should be avoided as they can harm the melamine surfaces.

While our cabinets are resistant to water, they are not completely waterproof, so it's important to use only damp cleaning cloths, avoiding saturation. Promptly address any large spills of water that may occur. We have a dedicated customer service line available to provide assistance and answer any inquiries you may have regarding our products.