

900mm 3 drawer base cabinet



equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips


- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

trendstyle

www.trendstyle.com.au

assembly instructions

included materials

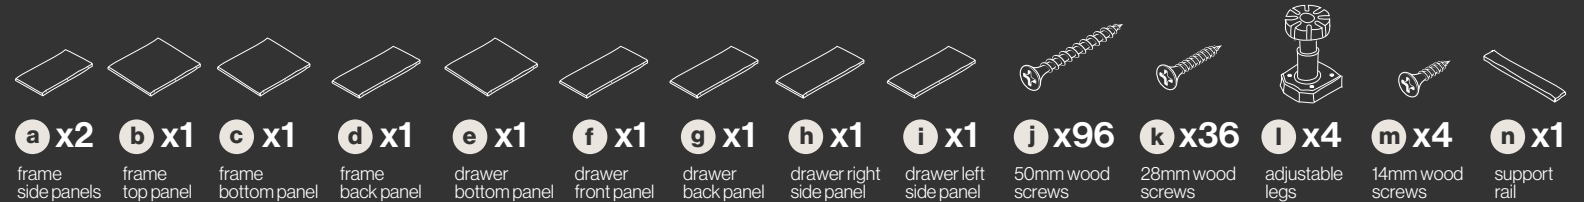


step 1

cabinet assembly


1

Attach the back panel (d) and bottom panel (c) using 50mm wood screws (j).

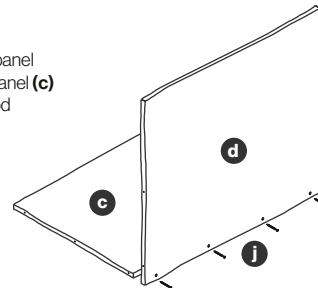


2

Attach the two side panels (a) to the back and bottom panels using 50mm wood screws (j).

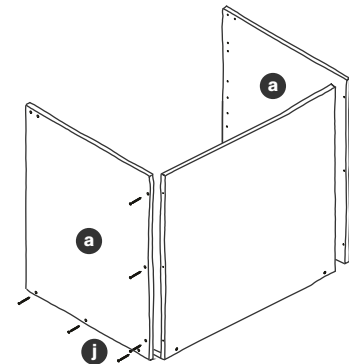


3

Attach the support rail (n) using 50mm wood screws (j).

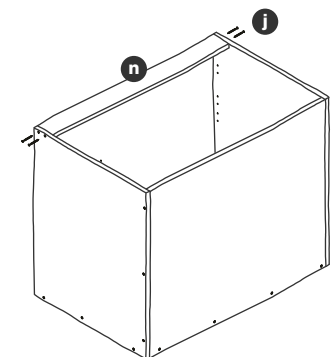


4

Locate the 4 groups of pre-drilled holes on the bottom panel & attach all adjustable leg plates (l) using 28mm wood screws (h).

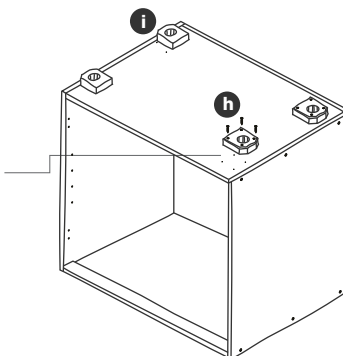


5

Attach both legs (h) to the plates and adjust the height of the legs to 145mm.

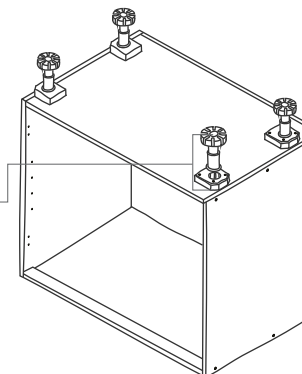

6

2 drawer cabinet frame is now complete. Follow the next steps to assemble the drawers.

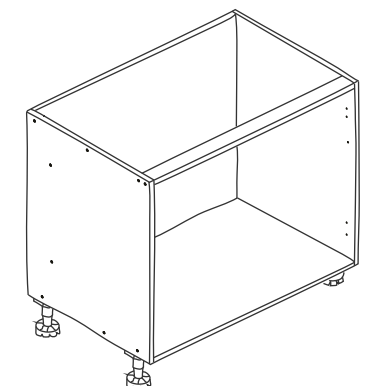


step 2

drawer assembly


1

Attach the bottom panel (**e**) to the front (**f**) and back panels (**g**) using 50mm wood screws (**j**).

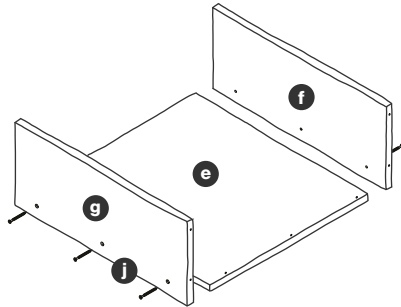


2

Attach the right (**h**) and left panels (**i**) using 50mm wood screws (**j**).

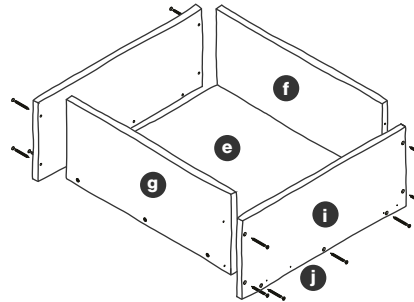

3

Drawer is now complete.

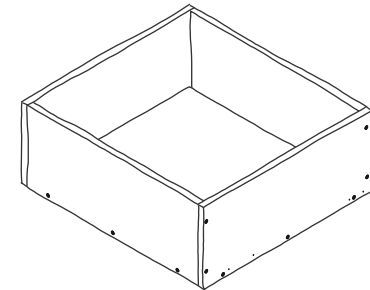


step 3

joining the cabinets


1

Check your cabinets are level.

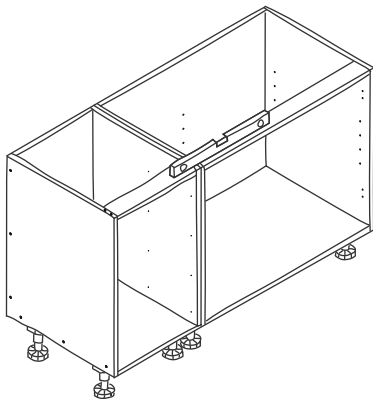


2

Clamp cabinets using quick release clamps. Once secured, pre-drill screw holes.

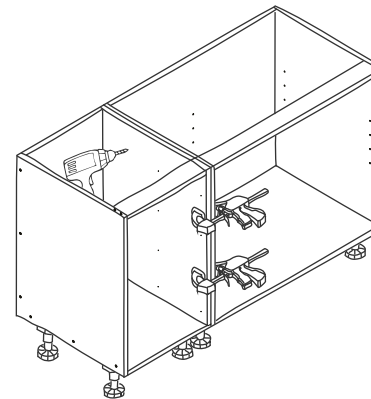

3

Attach the cabinets together using 28mm wood screws (**e**).

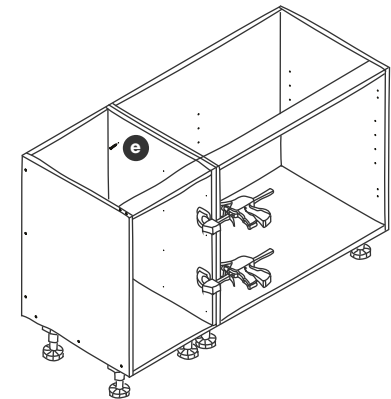


step 4

attaching drawer runners


1

Release the drawer guide from the runner by pulling or pushing the black tab.

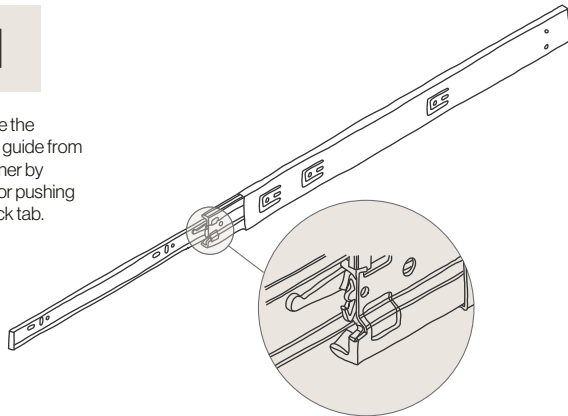


2

Install runner guide to the right and left hand drawer panels using 14mm wood screws (m), inserted into pre-drilled holes.

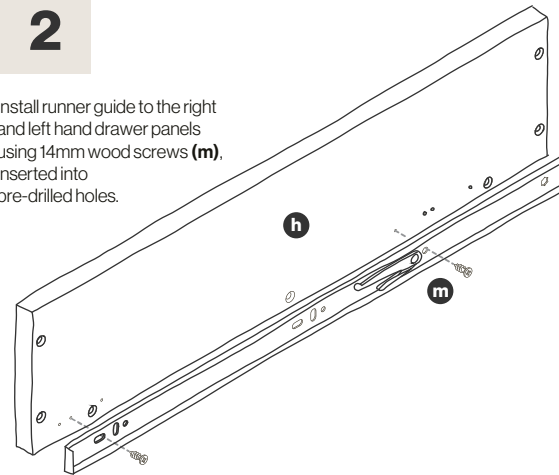

3

Attach runners to cabinet drawer frame side panels using 14mm wood screws (m) inserted into pre-drilled holes.

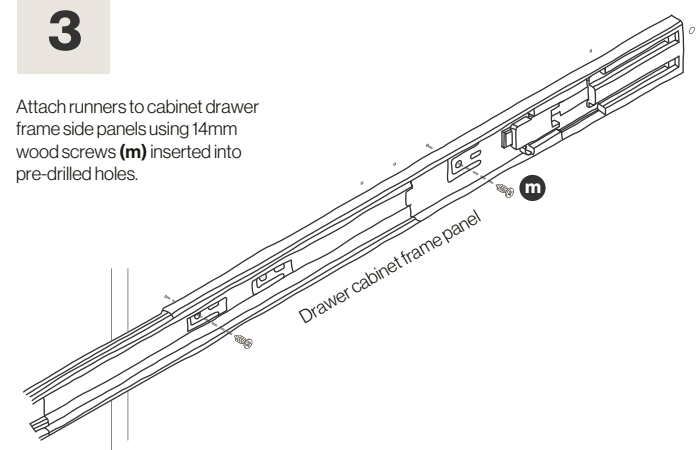


step 5

attaching drawer panels

profiles


country profile

alpine profile

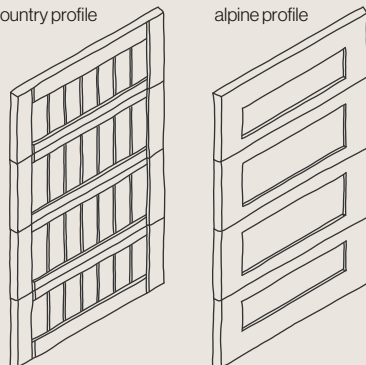

1


Align the bottom drawer panel flush with the bottom of the cabinet base and ensure it aligns with the sides of the cabinet. Secure it in place by clamping. Pre-drill and attach using 28mm screws (k).

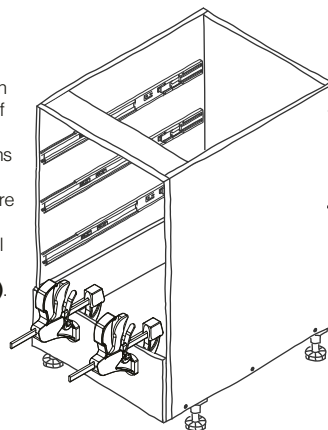

2

Ensure that the adjacent drawers are flush on both sides and maintain consistent spacing between them. Repeat for the next drawer.

Tip: Use a consistent spacer measurement between the drawers. 2 x \$1 coins are ideal.

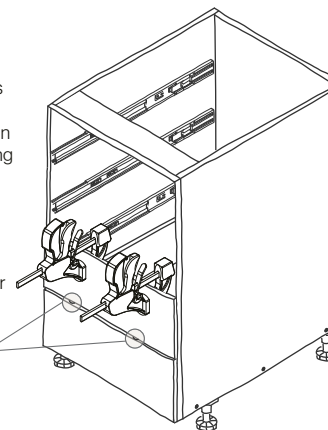

3

For the top drawer, securely fasten the drawer front onto the cabinet support rail using the quick release clamp.

