

400mm pantry



equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

trendstyle

www.trendstyle.com.au

assembly instructions

included materials




step 1

cabinet assembly


1

Attach the back panel (d) and top panel (b) using 50mm wood screws (f).

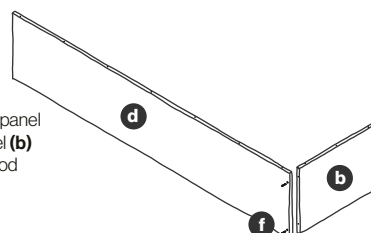


2

Attach one of the side panels (a) to the top and back panels using 50mm wood screws (f).

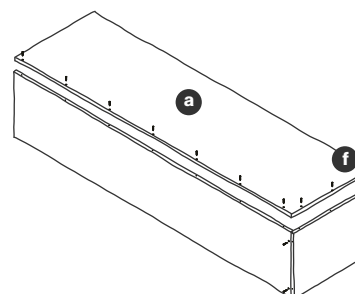


3

Attach the remaining side panel (a) to the top and back panels using 50mm wood screws (f).

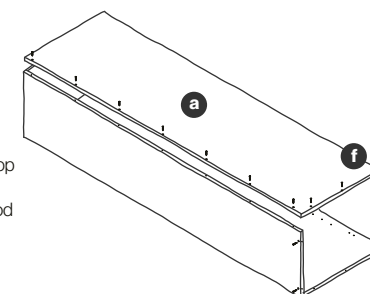


4

Attach the bottom panel (c) to the back and side panels using 50mm wood screws (f).

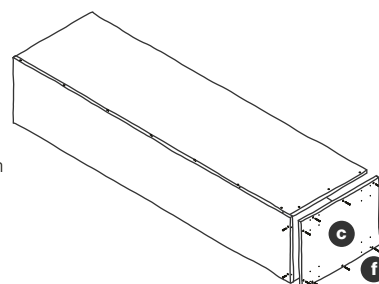


5

Locate the 4 groups of pre-drilled holes on the bottom panel & attach the adjustable leg plates (h) using 28mm wood screws (g).

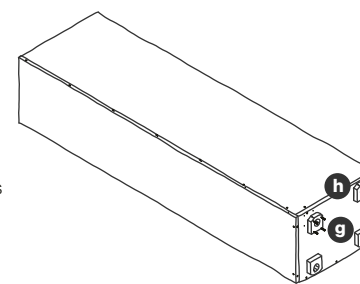

6

Attach all of the legs (h) to the plates and adjust the height of the legs to 145mm.

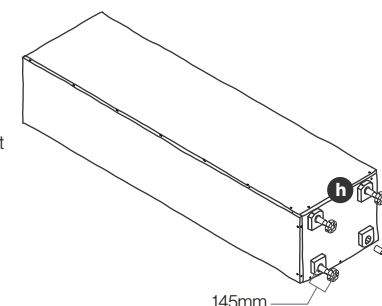


145mm

step 2

installing the shelves


1

Turn your cabinet upright and insert the 4 plastic shelf supports (i) at your desired shelf heights.

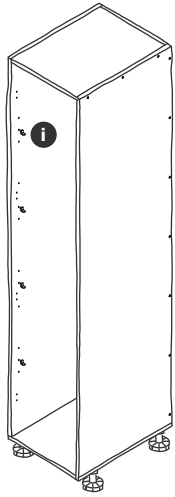


2

Slide the shelf (e) into position, resting on the supports.

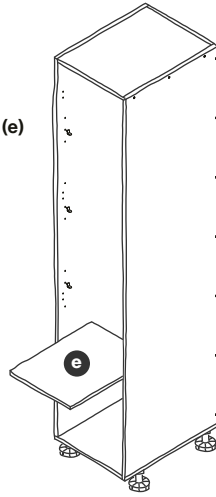

3

Slide the remaining shelves into position, resting on the supports.

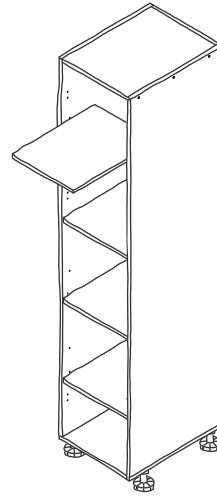


step 3

joining cabinets

1

Check your cabinets are level. Clamp cabinets using quick release clamps. Attach the cabinets together using 28mm wood screws (g).

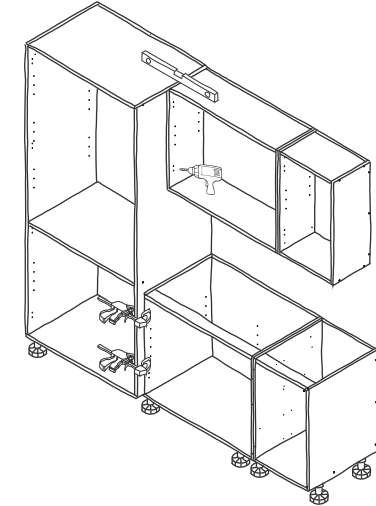


step 4

securing cabinets to wall

1

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

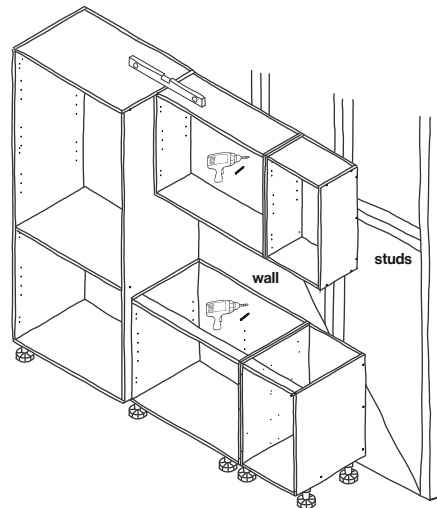

step 5

attaching the door

1

- Clip the hinge plates onto the door panel
- Push down to clip hinge together securely
- Adjust the screws to align the doors and add extra screws once door is positioned correctly.

