

500mm **pantry****equipment required**


- **Cordless drill**
- **Drill bits:**  
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**  
Safety glasses, ear muffs, dust mask

**important tips**


- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

**assembly instructions****included materials****step 1****cabinet assembly****1**


Attach the back panel (**d**) and top panel (**b**) using 50mm wood screws (**f**).

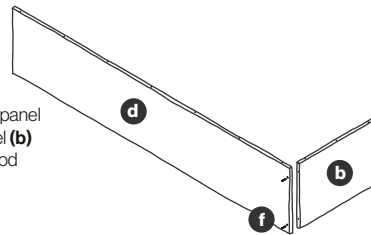**2**


Attach one of the side panels (**a**) to the top and back panels using 50mm wood screws (**f**).

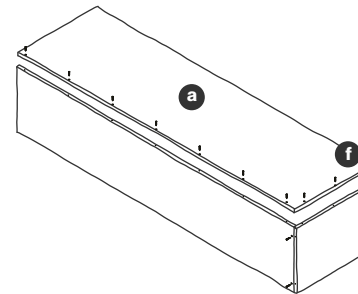**3**


Attach the remaining side panel (**a**) to the top and back panels using 50mm wood screws (**f**).

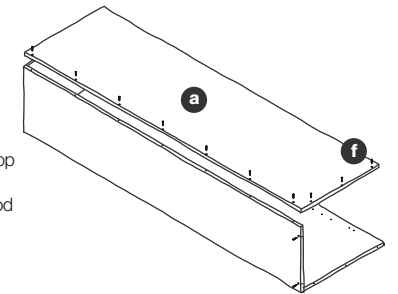**4**


Attach the bottom panel (**c**) to the back and side panels using 50mm wood screws (**f**).

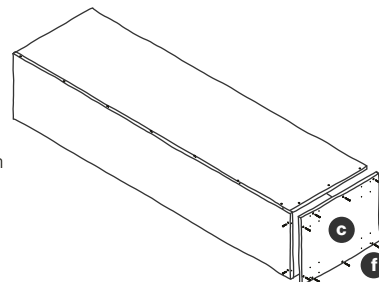**5**

Locate the 4 groups of pre-drilled holes on the bottom panel & attach the adjustable leg plates (**h**) using 28mm wood screws (**g**).

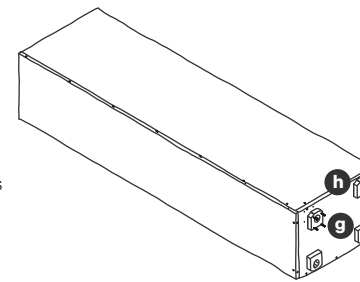**6**

Attach all of the legs (**h**) to the plates and adjust the height of the legs to 145mm.

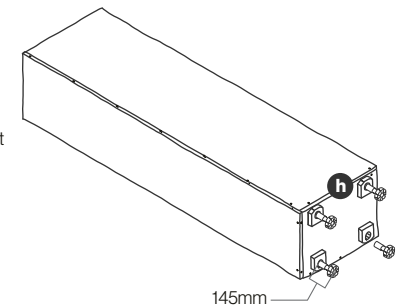


## step 2

### installing the shelves


1

Turn your cabinet upright and insert the 4 plastic shelf supports (i) at your desired shelf heights.

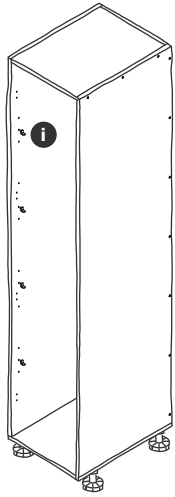


2

Slide the shelf (e) into position, resting on the supports.

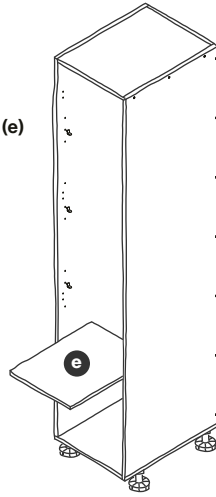

3

Slide the remaining shelves into position, resting on the supports.

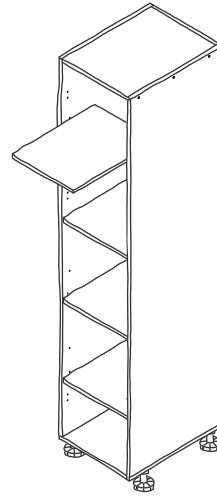


## step 3

### joining cabinets

1

Check your cabinets are level. Clamp cabinets using quick release clamps. Attach the cabinets together using 28mm wood screws (g).

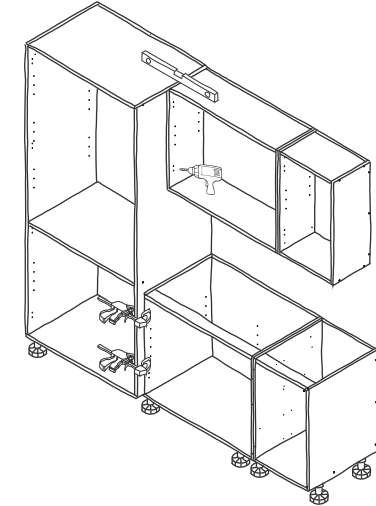


## step 4

### securing cabinets to wall

1

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

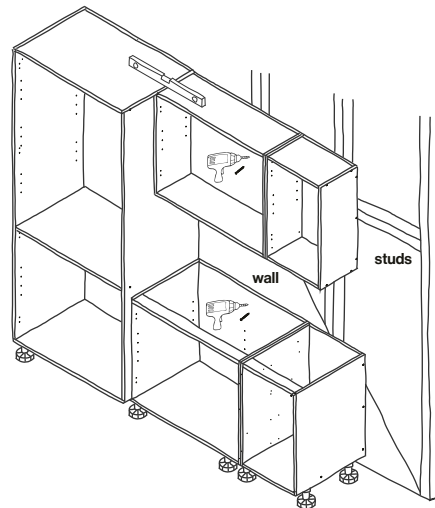

## step 5

### attaching the door

1

- Clip the hinge plates onto the door panel
- Push down to clip hinge together securely
- Adjust the screws to align the doors and add extra screws once door is positioned correctly.

