


600mm 1 drawer base cabinet

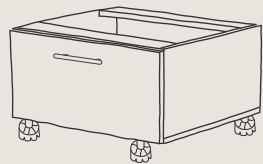

equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips


- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

trendstyle

www.trendstyle.com.au

assembly instructions

included materials

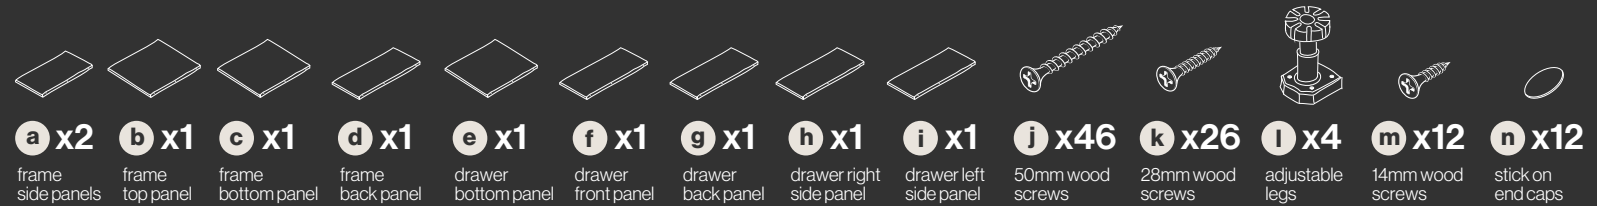


step 1

cabinet assembly


1

Attach the back panel (**b**) to the top and bottom panels (**a**) using 50mm wood screws (**g**).

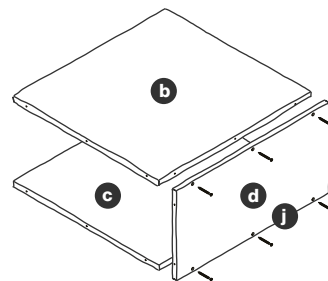

2


Attach the two side panels (**a**) using 50mm wood screws (**g**).

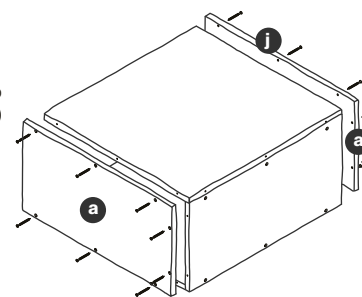

3


Locate the 4 groups of pre-drilled holes on the bottom panel & attach all adjustable leg plates (**i**) using 28mm wood screws (**h**).

Note: When incorporating the cabinet into an underbench microwave cabinet, position it with the hole set 68mm back from the front. If it's part of an oven tower, place it with the hole set 88mm back.

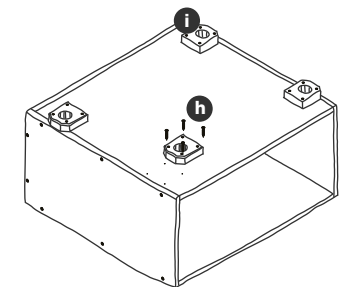


4

Attach legs (**f**) to the plates and adjust the height of the legs to 145mm.

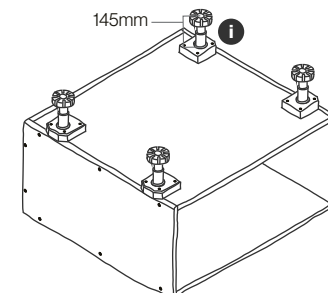

5

Drawer cabinet frame is now complete.

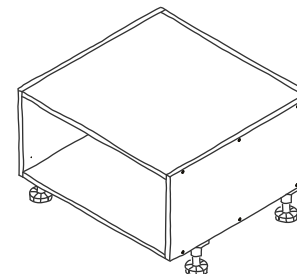


step 2

drawer assembly


1

Attach the bottom panel (e) to the front (f) and back panels (g) using 50mm wood screws (j).

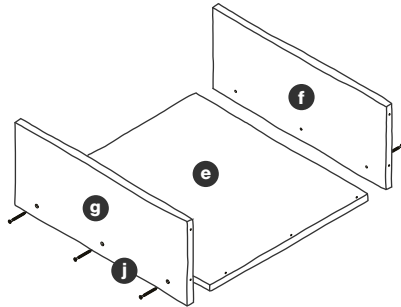


2

Attach the right (h) and left panels (i) using 50mm wood screws (j).

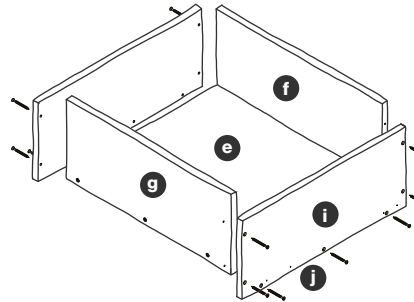

3

Drawer is now complete.

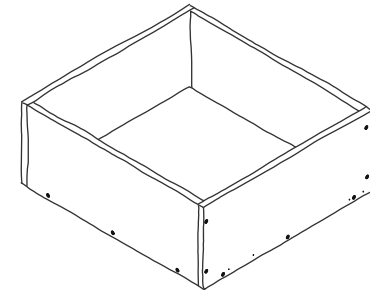


step 3

joining the cabinets


1

Check your cabinets are level.

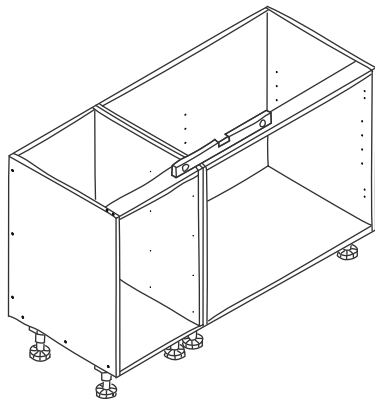


2

Clamp cabinets using quick release clamps. Once secured, pre-drill screw holes.

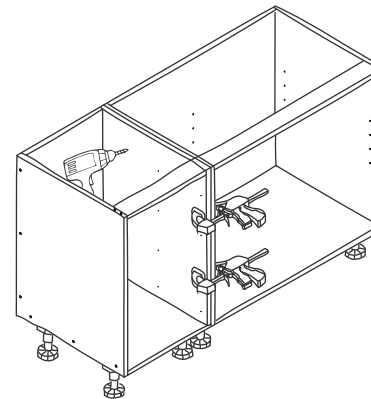

3

Attach the cabinets together using 28mm wood screws (e).

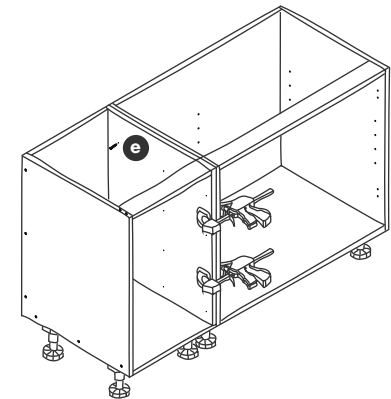


step 4

attaching drawer runners


1

Release the drawer guide from the runner by pulling or pushing the black tab.

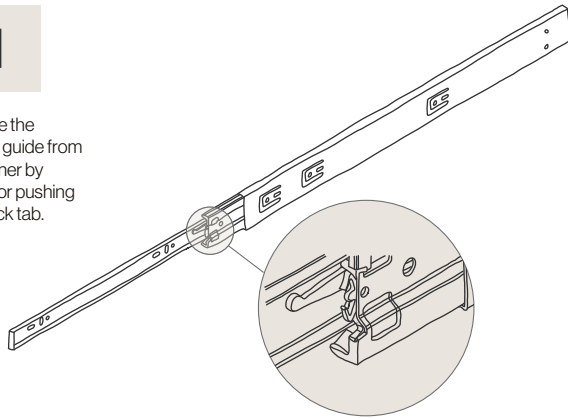


2

Install runner guide to the right and left hand drawer panels using 14mm wood screws (m), inserted into pre-drilled holes.

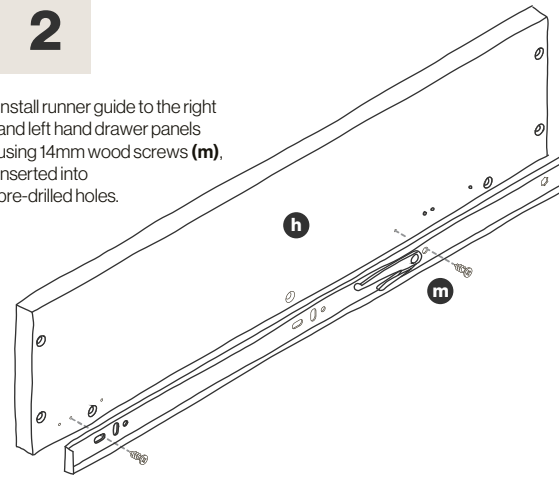

3

Attach runners to cabinet drawer frame side panels using 14mm wood screws (m) inserted into pre-drilled holes.

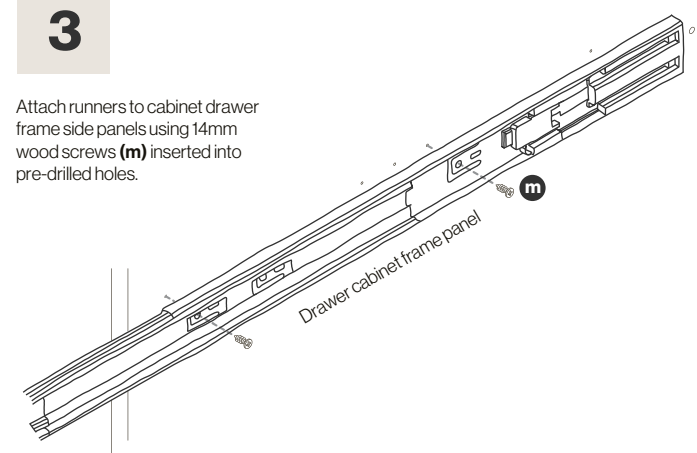


step 5


attaching drawer panels

profiles

country profile

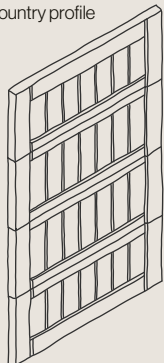


alpine profile

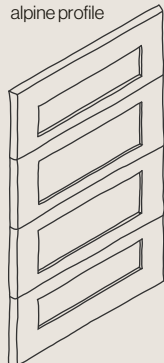

1


Align the bottom drawer panel flush with the bottom of the cabinet base and ensure it aligns with the sides of the cabinet. Secure it in place by clamping. Pre-drill and attach using 28mm screws (k).

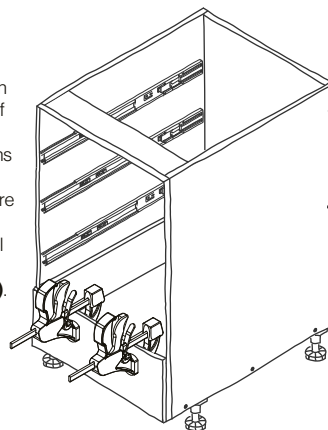

2

Ensure that the adjacent drawers are flush on both sides and maintain consistent spacing between them. Repeat for the next drawer.

Tip: Use a consistent spacer measurement between the drawers. 2 x \$1 coins are ideal.

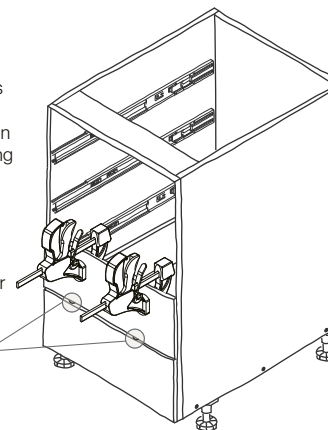

3

For the top drawer, securely fasten the drawer front onto the cabinet support rail using the quick release clamp.

