

600mm 1 door broom cupboard



equipment required

- Cordless drill
- Drill bits:
No 2 screw tip, 4mm bit, No 12 countersinking bit
- 65mm wood screw
- Wall fixing (only if fixing cabinet to wall)
- Tape measure
- Adjustable square
- Spirit level
- Quick release clamps
- Pencil
- Safety gear:
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

trendstyle

www.trendstyle.com.au

assembly instructions

included materials




step 1

cabinet assembly


1

Attach the top panel (b) and back strip (d) using cam + pin set (n).

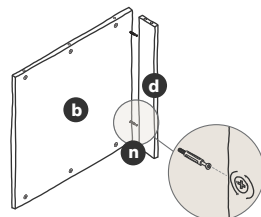


2

- Attach one of the side panels (a) to the top panel using cam + pin set (n).
- Attach the fixed shelf (e) to the side panel (a) using cam + pin set (n).

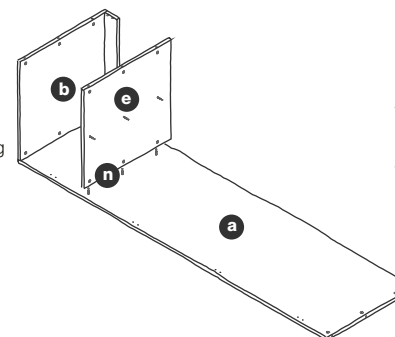

3


Attach the middle panel (f) to the fixed shelf (e) using cam + pin set (n).

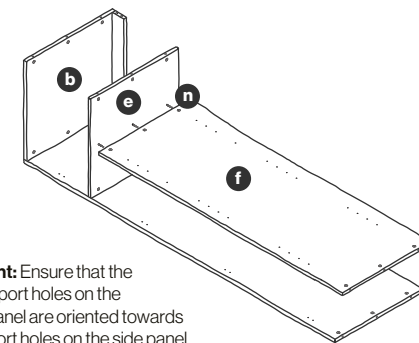

Important: Ensure that the shelf support holes on the middle panel are oriented towards the support holes on the side panel.


4

Attach remaining side panel (a) to the top and fixed shelf using cam + pin set (n).

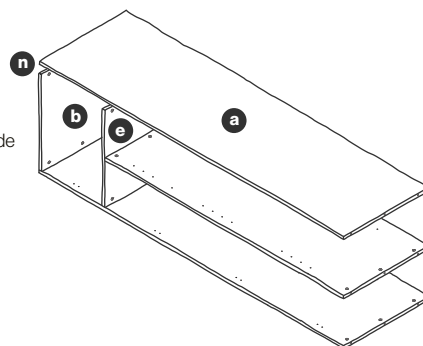


5

Attach the bottom panel (c) to the two side panels (a) and middle panel using cam + pin set (n).

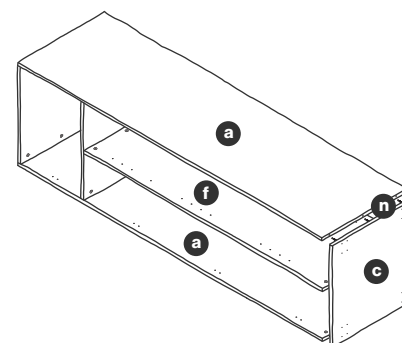

6

Attach all of the legs (h) to the plates using adjustable feet screws (i) and adjust the height of the legs to 145mm.

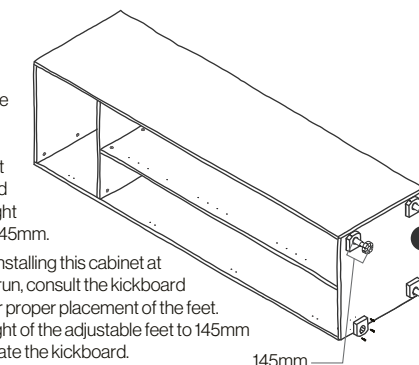

Important: If installing this cabinet at the end of the run, consult the kickboard instructions for proper placement of the feet. Adjust the height of the adjustable feet to 145mm to accommodate the kickboard.


step 1

cabinet assembly *continued*

7


Using the plastic joiner bead (**p**) as shown in diagram, attach the two back panels (**k**) using 14mm wood screws (**o**) and the 1 inch nails (**j**).

Note: The white side of the back panel should be placed in the interior of the cabinet.

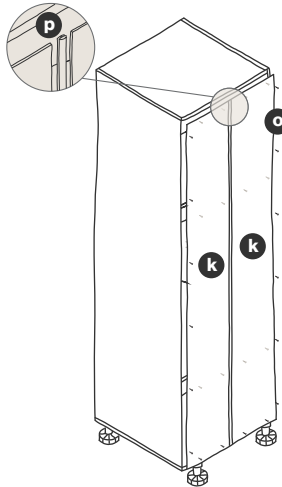

8

Push on the release tab to remove the hinge from the hinge plate (**m**).

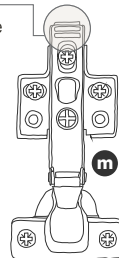


9

Attach the four hinges (**m**) to the door (**l**) using 14mm wood screws (**n**).

Ensure that the screws are inserted through the lugs.


Once the hinge has been adjusted, secure 2 more screws in the round holes in each plate.

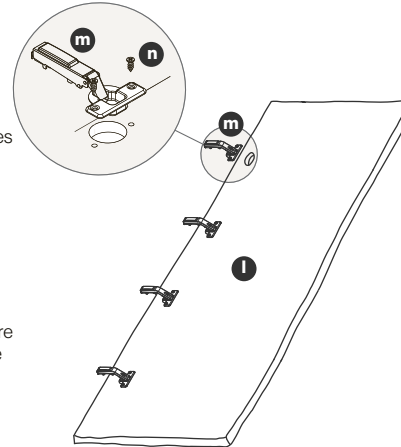

10

Attach the hinge plate to the left hand side of the cabinet, securing with 14mm wood screws (**n**) ensuring they are screwed through the lugs.

Once the hinges have been adjusted, secure 2 more screws in the round holes in each plate.





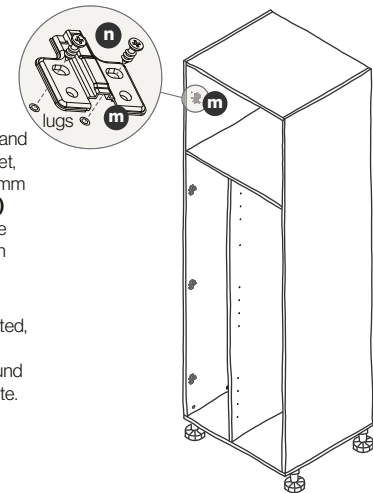


step 2

attaching the door

1

- Clip the hinge plates onto the door panel
- Push down to clip hinge together securely
- Adjust the screws to align the doors and add extra screws once door is positioned correctly.

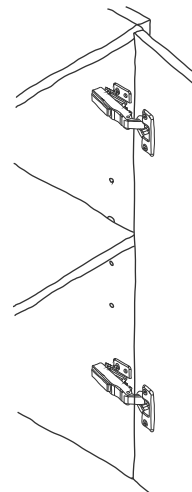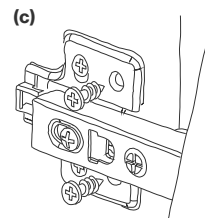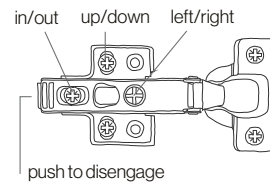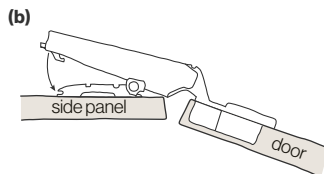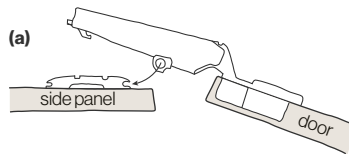


step 3

installing the shelves


1

Insert the plastic shelf supports (**g**) at your desired shelf heights.

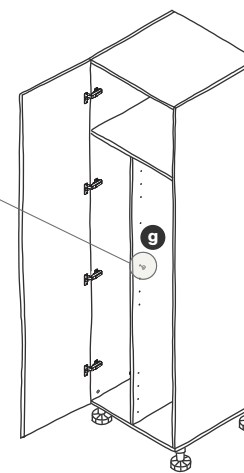

2


Slide the adjustable shelves (**q**) into position, resting on the supports.

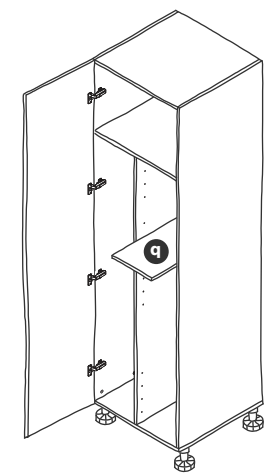


step 4**attaching the handle****1**

Measure down 980mm from the top of the door, 40mm in from the right hand side and mark with a pencil, this will be the location of the top of the door handle. Measure a further 96mm down for the bottom of the handle. Pre-drill using a 4.5mm drill bit.


Tip: Use masking tape on both door sides to avoid damage while the holes are being pre-drilled.

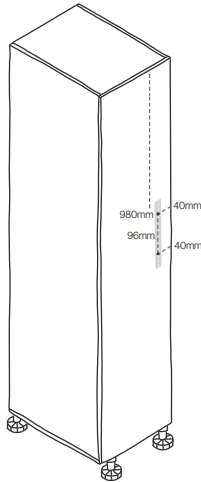**2**

Once holes are pre-drilled screw the handle on from behind the door panel, using the handle screws.

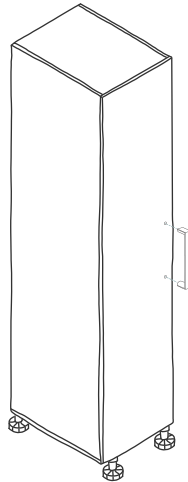
**step 5****attaching the cabinets and securing to wall****1**

- Clamp cabinets using quick release clamps. Once secured, pre-drill screw holes.
- Attach the cabinets together using using 14mm wood screws (o).

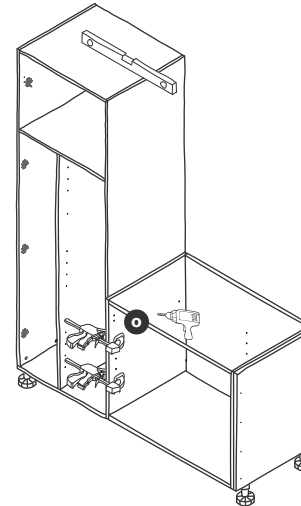**2**

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

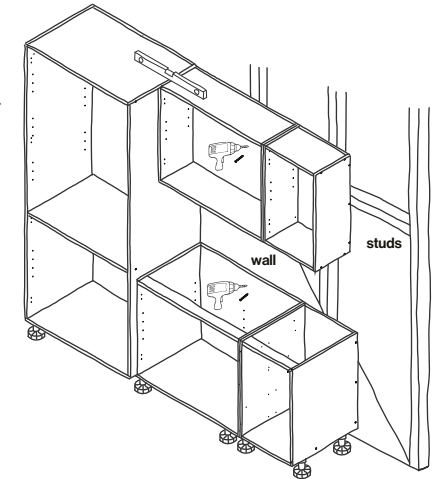**! care instructions**

Your Trendstyle cabinets are crafted from high-quality materials to ensure longevity, provided that proper care and maintenance are observed.

When cleaning your cabinets, it is essential to use a non-abrasive cleaner and avoid materials such as steel wool or abrasive items that may cause scratches and damage. Harsh chemicals or thinner-based products should be avoided as they can harm the melamine surfaces.

While our cabinets are resistant to water, they are not completely waterproof, so it's important to use only damp cleaning cloths, avoiding saturation. Promptly address any large spills of water that may occur. We have a dedicated customer service line available to provide assistance and answer any inquiries you may have regarding our products.