


600mm corner wall cabinet

trendstyle

www.trendstyle.com.au

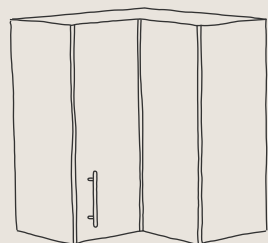

equipment required


- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

assembly instructions

included materials

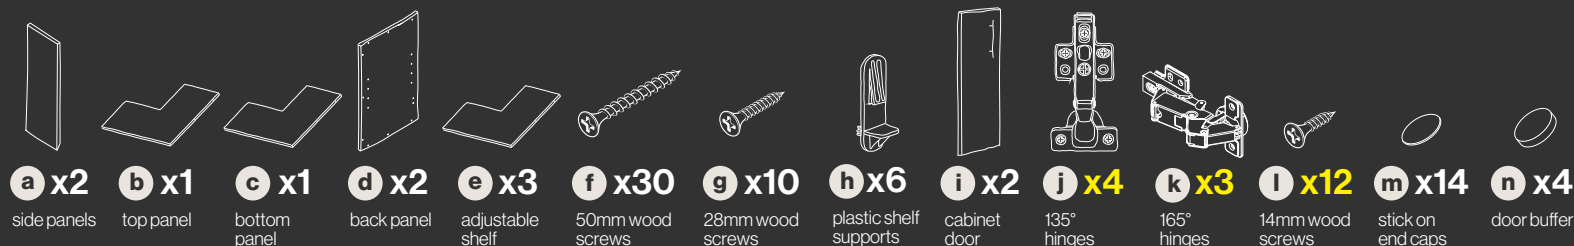


step 1

cabinet assembly


1

Attach the top **(b)** and bottom panels **(c)** to one of the back panels **(d)** using 50mm wood screws **(f)**.

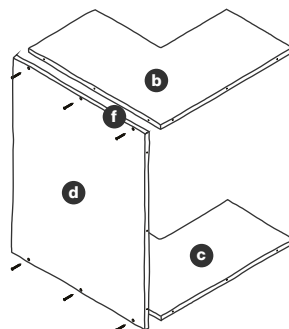


2

Attach the remaining back panel **(d)** using 50mm wood screws **(f)**.

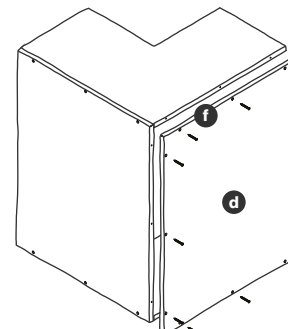

3

Attach the two side panels **(a)** using 50mm wood screws **(f)**.

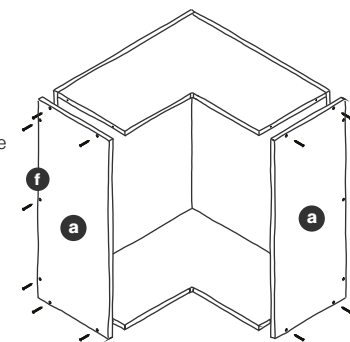


step 2

installing the shelves


1

Insert the plastic shelf supports **(h)** at your desired shelf height.

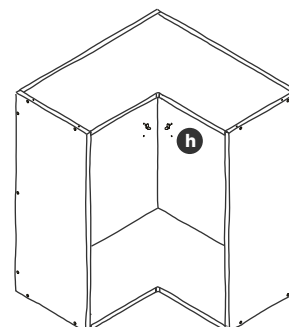


2

Slide the adjustable shelf **(e)** in carefully and rest on the plastic shelf supports **(h)**.

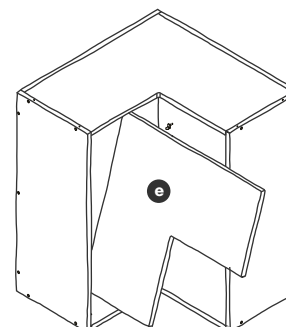

3

Corner cabinet is now complete and ready for joining to other cabinets and fixing to the wall.

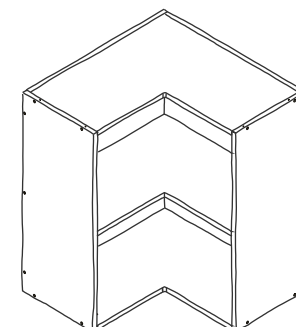

step 3

joining cabinets


1

Using cabinet supports, align the cabinets and hold together using quick release clamps.

Ensure the cabinets are level.

Tip: It may be best to align the top of the cabinets with the top of your pantry.

Note: AUS/NZ standards requires a minimum distance of 600mm between burners and the rangehood.

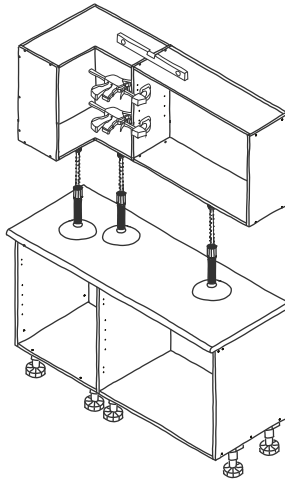


step 4

securing cabinets to wall

1

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

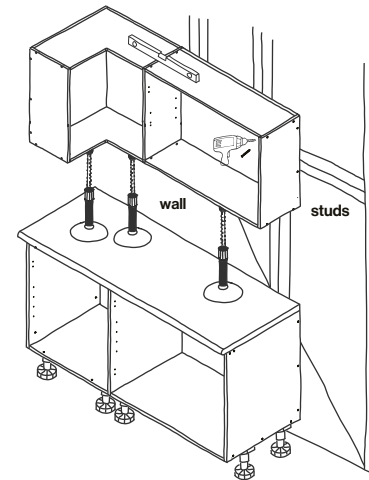


step 5

attaching the corner cabinet hinges and doors

1


Push on the release tab to remove the hinge from the 135° hinge plate (j).

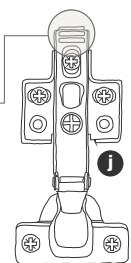

2

Attach the hinge plate to the lugs in the cabinet, securing with 14mm wood screws (l) through the elongated holes.


Note: Ensure plastic lugs are in the pre-drilled holes before you begin this step and the next.

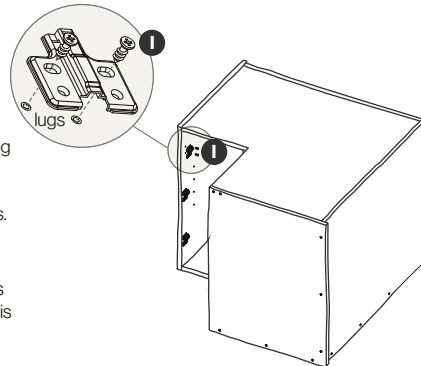

3

Attach the hinge plate to the door, securing with 14mm wood screws (l) ensuring they are screwed through the lugs.


Once the hinge has been adjusted, secure 2 more screws in the round holes in each plate.

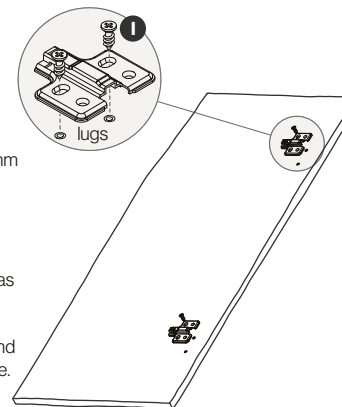

4

a. Attach the two 135° hinges (j) to the second door using 14mm wood screws (l).

b. Secure the three 165° hinges (k) to the opposite side of the door panel. Ensure that the screws are inserted through the lugs.

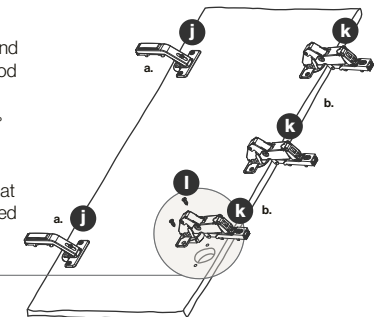


step 5

continued

5

Attach the two door panels by clipping the 135° hinges (j) together.





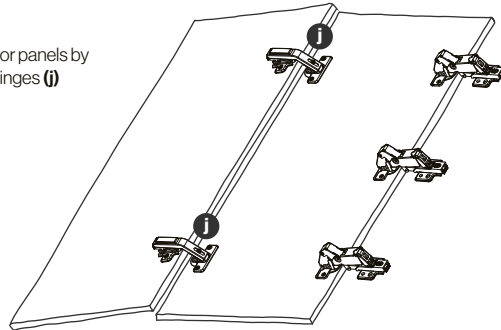


step 6

attaching the door

1

- Clip the hinge plates onto the door panel
- Push down to clip hinge together securely
- Adjust the screws to align the doors and add extra screws once door is positioned correctly.

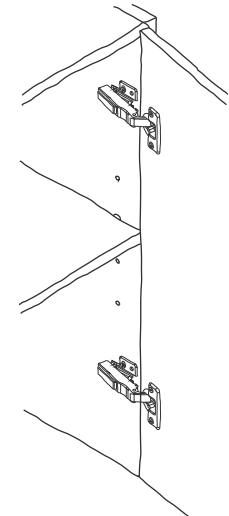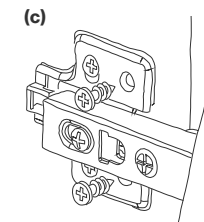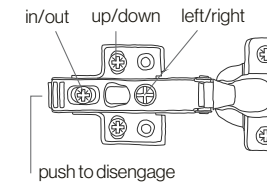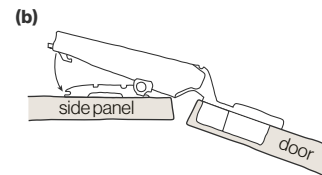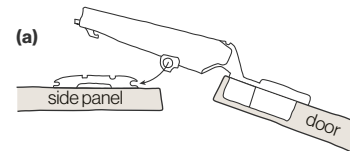

! care instructions

Your Trendstyle cabinets are crafted from high-quality materials to ensure longevity, provided that proper care and maintenance are observed.

When cleaning your cabinets, it is essential to use a non-abrasive cleaner and avoid materials such as steel wool or abrasive items that may cause scratches and damage. Harsh chemicals or thinner-based products should be avoided as they can harm the melamine surfaces.

While our cabinets are resistant to water, they are not completely waterproof, so it's important to use only damp cleaning cloths, avoiding saturation. Promptly address any large spills of water that may occur. We have a dedicated customer service line available to provide assistance and answer any inquiries you may have regarding our products.