

600mm oven tower cabinets




equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

assembly instructions

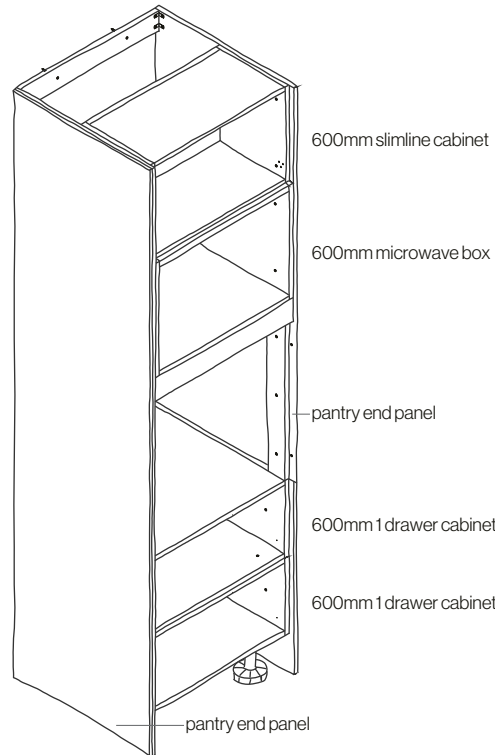

included materials




step 1

600mm high oven assembly


1

Pre-drill, then attach two 600mm 1 drawer cabinets 28mm wood screws (a).

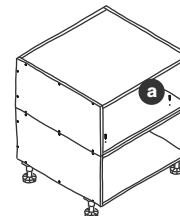


2

Attach the pantry end panels with 28mm wood screws (a). Ensure you recess the drawer cabinets back 18mm for melamine and 20mm for thermoformed doors.

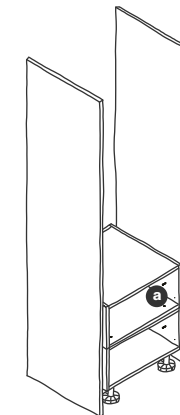


3

Align the top of the microwave box 360mm down from the top of the end panels and attach with 28mm wood screws (a).

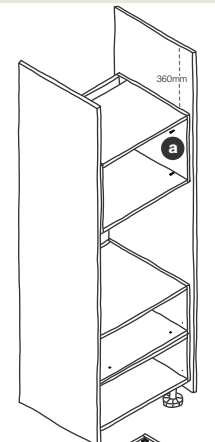


4

- Attach both sides of the fixing rail to the top of the end panels using the 90° angle bracket and 14mm wood screws (b).
- Attach the tower to the wall, screwing through the fixing rail into the studs. Use wood screws that are at least 65mm in length.

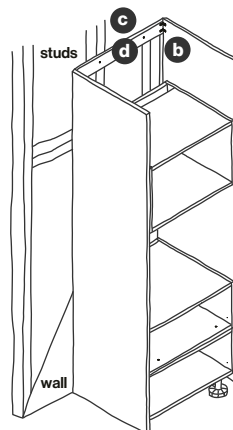


5

Attach the slimline cabinet, using 28mm wood screws (a), on top of the microwave box. Ensure you recess the slimline cabinet back 18mm for melamine and 20mm for thermoformed doors.

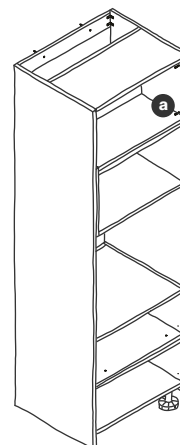


6

Using 28mm wood screws, secure the 598mm cleats (e) 20mm back from the end panel fronts, ensuring they are sitting on top of the drawer cabinet.

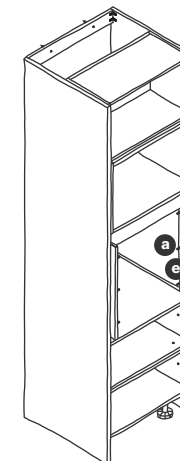

7

Attach the front panel (g) by screwing the angle brackets (c) to the underside of the microwave box using 14mm wood screws (b).

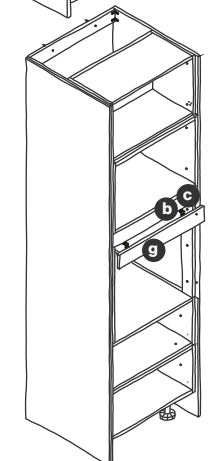

890mm oven tower cabinets




equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

assembly instructions

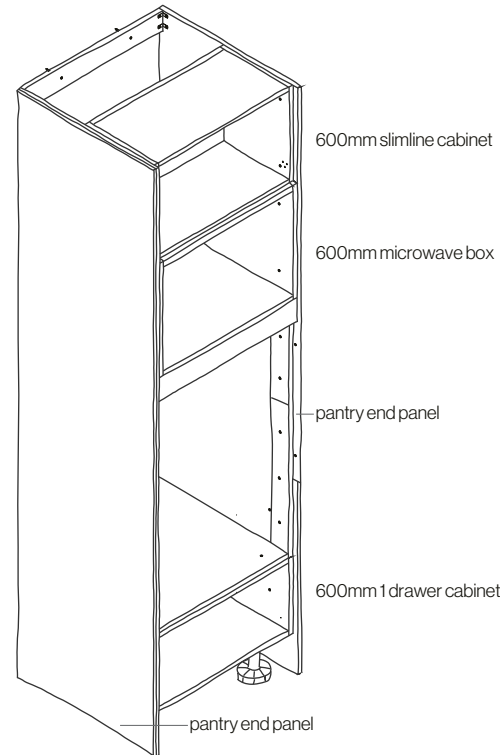

included materials




step 1

890mm high oven assembly

1

Attach the pantry end panels to the drawer cabinet with 28mm wood screws (a).


Ensure you recess the drawer cabinets back 18mm for melamine and 20mm for thermoformed doors.

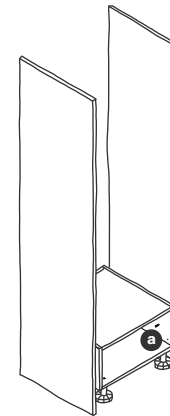

2

Align the top of the microwave box 360mm down from the top of the end panels and attach with 28mm wood screws (a).


The Microwave box must sit in line with the front of the end panels.

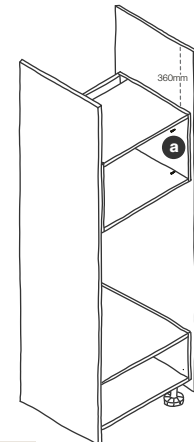

3

a. Attach both sides of the fixing rail to the top of the end panels using the 90° angle bracket and 14mm wood screws (b).


b. Attach the tower to the wall, screwing through the fixing rail into the studs. Use wood screws that are at least 65mm in length.

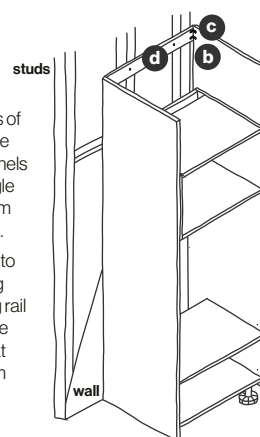

4


Attach the slimline cabinet, using 28mm wood screws (a), on top of the microwave box.

Ensure you recess the slimline cabinet back 18mm for melamine and 20mm for thermoformed doors.

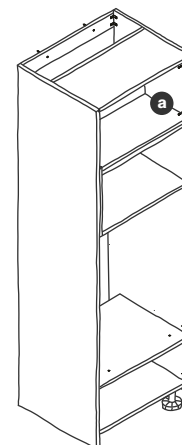

5

Using 28mm wood screws, secure the 598mm (e) and 298mm (f) cleats 20mm back from the end panel fronts, ensuring they are sitting on top of the drawer cabinet.

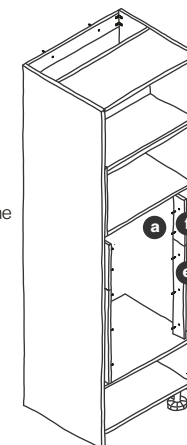

6

Attach the front panel (g) by screwing the angle brackets (c) to the underside of the microwave box using 14mm wood screws (b).

