

attaching end panels

equipment required

- **Cordless drill**
- **Drill bits:**
No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
Safety glasses, ear muffs, dust mask

important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

We offer a dedicated customer service line for advice or any questions you may have on Trendstyle products.


(08) 9390 4638
customer.service@trendstyle.com.au

trendstyle

www.trendstyle.com.au

assembly instructions

included materials

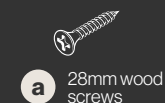


attaching base panels

Attach the end panel to your cabinet, pre-drill and use 28mm wood screws to attach.

Note 1: With thermoformed panels, ensure the round edge is facing out.

Note 2: The end panel will sit flush on the floor. Slightly cutting the panel to fit may be needed if the floor is uneven.

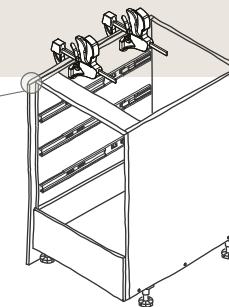


attaching wall & slimline panels

Attach the end panel to your cabinet, pre-drill and use 28mm wood screws to attach.

Note 1: With thermoformed panels, ensure the round edge is facing out.

Note 2: Set the cabinet back from the front of the end panels. 18mm for melamine doors and 20mm for thermoformed doors.

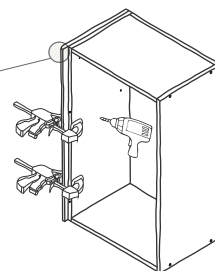


attaching pantry panels

Attach the end panel to your cabinet, pre-drill and use 28mm wood screws to attach.

Note 1: With thermoformed panels, ensure the round edge is facing out.

Note 2: The end panel will sit flush on the floor. Slightly cutting the panel to fit may be needed if the floor is uneven.

Note 3: Set the cabinet back from the front of the end panel by 20mm.


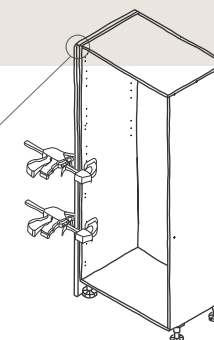


attaching island back panels

1

Measure the back of the joined cabinets. You may need to cut panels to fit, if so they should be cut to equal lengths.


• **Note:** The end panels and back panel must sit flush with each other.

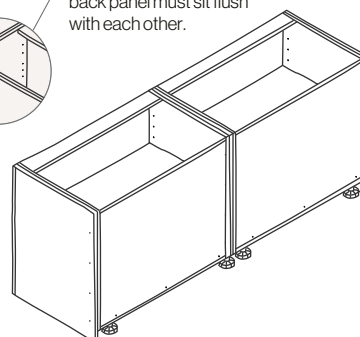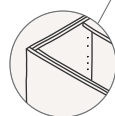

2

If cutting is required, mark the measurement onto the back panels. Use a fine tooth circular saw or jigsaw to cut.

Note: Use masking tape to avoid damage while cutting the panels.

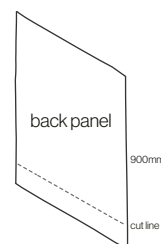


3

Attach the back panel to your cabinet, pre-drill and use 28mm wood screws to attach.

Note 1: The back panel will sit flush on the floor. Slightly cutting the panel to fit may be needed if the floor is uneven.

Note 2: Back panels need to be attached with the cut side inwards.

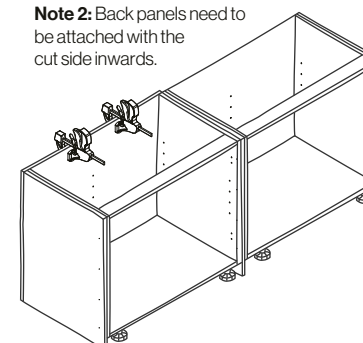

4

To add detail if you are joining multiple back panels, separate the panels with an aluminium strip if desired.

