


# 150mm wine rack

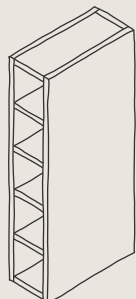

## equipment required

- Cordless drill
- Drill bits:  
No 2 screw tip, 4mm bit, No 12 countersinking bit
- 65mm wood screw
- Wall fixing (only if fixing cabinet to wall)
- Tape measure
- Adjustable square
- Spirit level
- Quick release clamps
- Cabinet supports
- Pencil
- Safety gear:  
Safety glasses, ear muffs, dust mask

## important tips


- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

**trendstyle**

www.trendstyle.com.au

# assembly instructions

## included materials

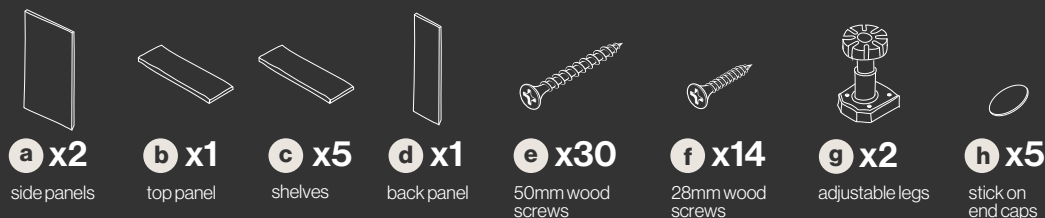


## step 1

## cabinet assembly


1

Attach the top panel (b) and shelves (c) to one of the side panels (a) using 50mm wood screws (e).

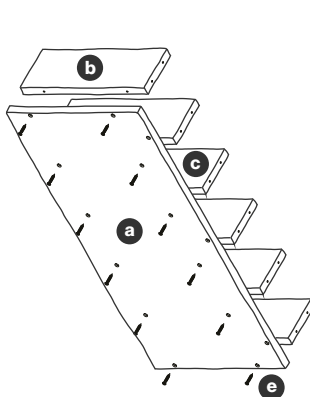


2

Attach the remaining side panel (a) to the shelf panels using 50mm wood screws (e).

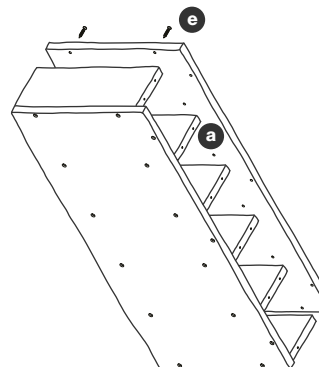

3


Attach the back panel (d) using 50mm wood screws (e).

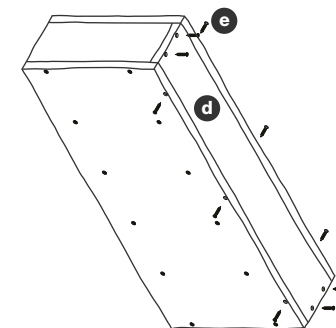

4


Attach the adjustable feet (g) using 28mm wood screws (f), if you are planning on using this wine rack as a base cabinet.

Secure the front foot 80mm back from the front panel and the back foot 20mm from the back panel. Ensuring they are attached on opposite sides.

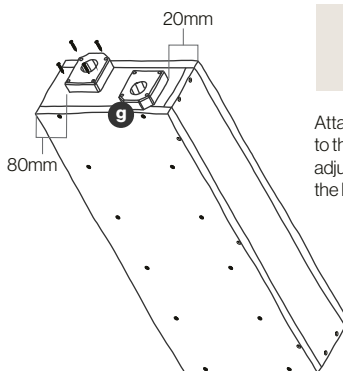


5

Attach both legs (g) to the plates and adjust the height of the legs to 145mm.

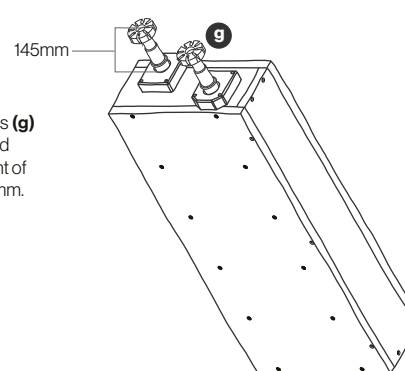

6

Turn your cabinet upright, it is now ready to attach to your other cabinetry.

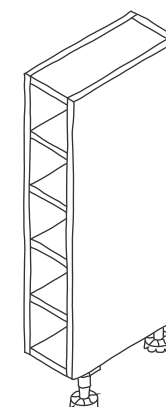


## step 2

## joining to cabinets and securing to wall

1

- Check your cabinets are level.
- For adjoining cabinets - If you have melamine doors, ensure the wine rack protrudes 18mm. For thermoformed doors, 20mm.
- Clamp cabinets using quick release clamps. Once secured, pre-drill screw holes.
- Attach the cabinets together using using 28mm wood screws (f).

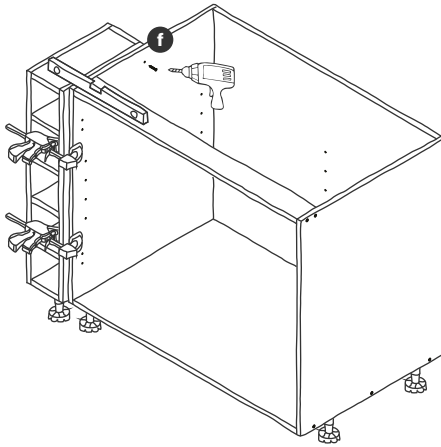


2

Using cabinet supports, align the cabinets and hold together using quick release clamps.

Ensure the cabinets are level.

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

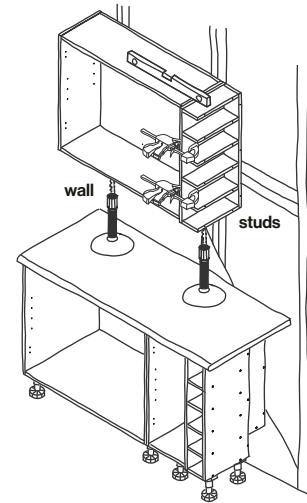


## step 3

## joining multiple wine racks

1

To connect several wine racks, firstly check they are all level. Detach the side panel opposite to the one on the cabinet where you intend to join them. Secure the connection by fastening 28mm wood screws through the side panel at each corner of the cabinet (f).

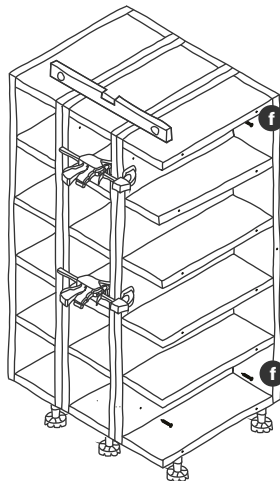

## ! care instructions

Your Trendstyle cabinets are crafted from high-quality materials to ensure longevity, provided that proper care and maintenance are observed.

When cleaning your cabinets, it is essential to use a non-abrasive cleaner and avoid materials such as steel wool or abrasive items that may cause scratches and damage. Harsh chemicals or thinner-based products should be avoided as they can harm the melamine surfaces.

While our cabinets are resistant to water, they are not completely waterproof, so it's important to use only damp cleaning cloths, avoiding saturation. Promptly address any large spills of water that may occur. We have a dedicated customer service line available to provide assistance and answer any inquiries you may have regarding our products.