trendstyle

www.trendstyle.com.au

# 700mm **pantry**

# assembly instructions

## equipment required

- **Cordless drill**
- **Drill bits:**
  No 2 screw tip, 4mm bit, No 12 countersinking bit
- **65mm wood screw**
- **Wall fixing** (only if fixing cabinet to wall)
- **Tape measure**
- **Adjustable square**
- **Spirit level**
- **Quick release clamps**
- **Pencil**
- **Safety gear:**
  Safety glasses, ear muffs, dust mask

## important tips

- Plumbing and electrical work must be carried out by a licenced trades person.
- Assemble on a soft surface to ensure the cabinetry doesn't get scratched.
- Wear appropriate safety gear during assembly.
- To securely mount the cabinets on a stud wall, use at least 8-gauge screws that are 65mm in length. However, if your wall is made of concrete, brick, or a different material, consult with an expert to determine the appropriate fastening method.
- Remove any protective wrapping before getting started

## included materials

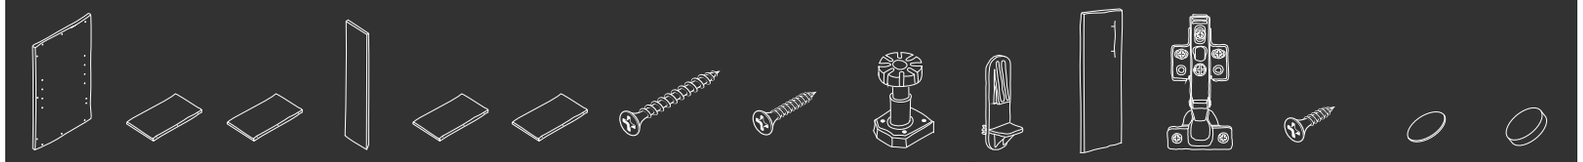

| a | b | c | d | e | f | g | h | i | j | k | l | m | n | o |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| x2 | x1 | x1 | x1 | x1 | x3 | x46 | x26 | x4 | x16 | x2 | x4 | x12 | x12 | x2 |
| side panels | top panel | bottom panel | back panel | fixed shelf | adjustable shelf | 50mm wood screws | 28mm wood screws | adjustable legs | plastic shelf supports | cabinet door | hinges | 14mm wood screws | stick on end caps | door buffer |

## step 1 cabinet assembly

### 1

Attach the top panel **(b)** side panels **(a)** and fixed shelf **(e)** using 50mm wood screws **(g)**.

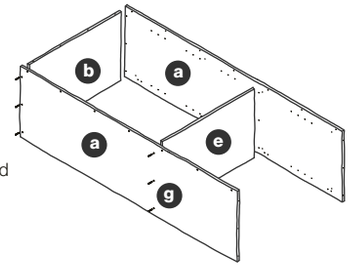


### 2

Attach the back panel **(d)** using 50mm wood screws **(g)**.

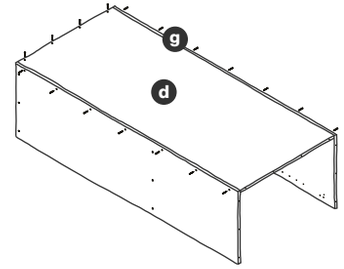


### 3

Attach the bottom panel **(c)** using 50mm wood screws **(g)**.

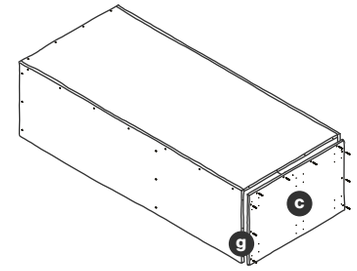


### 4

Locate the 6 groups of pre-drilled holes on the bottom panel & attach the adjustable leg plates **(i)** using 28mm wood screws **(h)**.

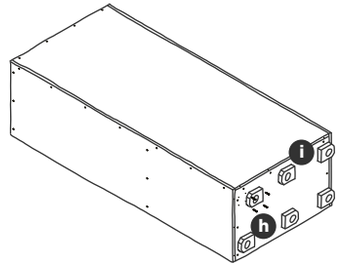


### 5

Attach all of the legs **(i)** to the plates and adjust the height of the legs to 145mm.

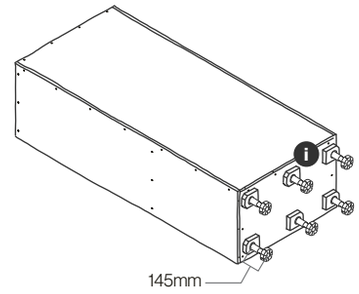

## step 2 installing the shelves

### 1

Turn your cabinet upright and insert the 4 plastic shelf supports **(j)** at your desired shelf heights.

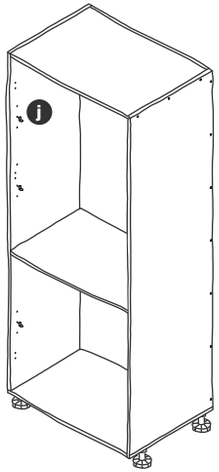


### 2

Slide the shelf **(f)** into position, resting on the supports.

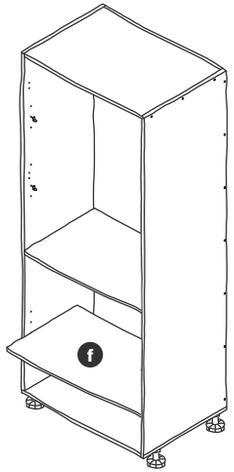


### 3

Slide the remaining shelves into position, resting on the supports.

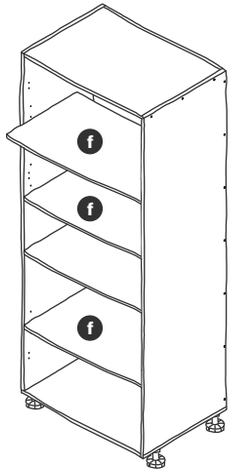


## step 3 joining cabinets

### 1

Check your cabinets are level. Clamp cabinets using quick release clamps. Attach the cabinets together using using 28mm wood screws **(h)**.

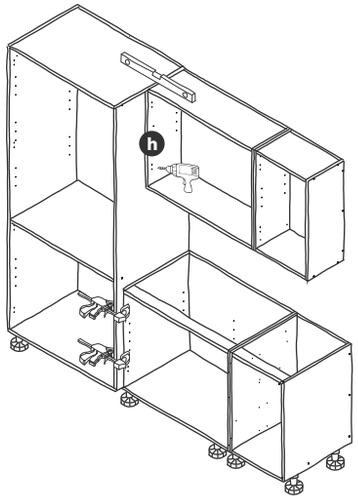


## step 4 securing cabinets to wall

### 1

Check again that all of your cabinets are level. If you have a plasterboard wall, attach cabinets using timber screws that are at least 65mm in length. Ensure each screw is inserted through a timber stud.

If your walls are made of another material eg. brick, concrete, steel etc, obtain professional advice on the best way to safely attach your cabinets.

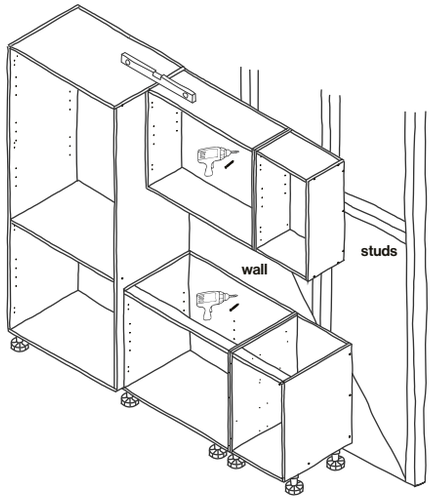


## step 5 attaching the door

### 1

a. Clip the hinge plates onto the door panel

b. Push down to clip hinge together securely
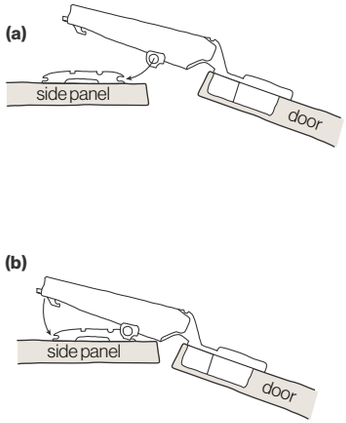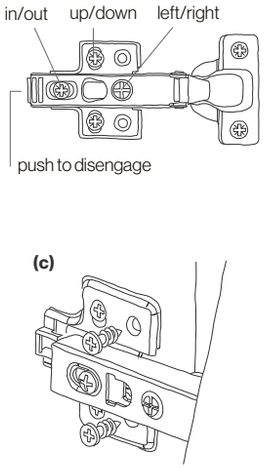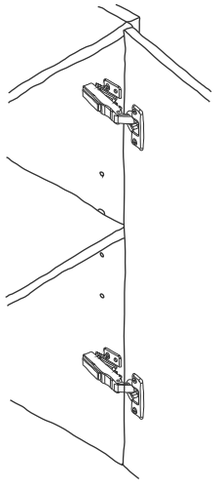
c. Adjust the screws to align the doors and add extra screws once door is positioned correctly.